



SEUIC Reference Manual

AUTOID[®] 3P Industrial Smartphone

Android Product User Manual

Version 1.0

Contents

Chapter 1. Instructions for Use	5
1.1 Cautions for laser scanning engines	5
1.2 Cautions for safety	5
1.3 Cautions for maintenance	5
Chapter 2. Appearance	2
Chapter 3. Keyboard	4
Chapter 4. Quick Start Guide	6
4.1 Power on	6
4.2 First use	6
4.3 Power off	6
4.4 Restart	6
4.5 Install SIM card	6
4.6 Install SD card	7
4.7 Install battery and battery cover	7
Chapter 5. About Charging	8
5.1 Charging time	8
5.2 Charging temperature	8
5.3 Battery charging	8
5.4 Cautions for battery use	8
5.5 LED indicators	9
Chapter 6. Main screen	10
6.1 Status bar icons	10
Chapter 7. Settings	12
7.1 Network & internet	12
7.1.1 WLAN	12
7.1.2 Mobile network	18
7.1.3 Data usage	23
7.1.4 Hotspot & tethering	24

7.1.5 VPN	26
7.1.6 Airplane mode	26
7.2 Connected devices	26
7.3 Apps & notifications	27
7.4 Battery	28
7.5 Display	29
7.6 Sound	32
7.7 Storage	33
7.8 Location	34
7.9 Security	35
7.10 Password and Account	36
7.11 Accessibility	37
7.12 System	39
7.12.1 Languages & input	39
7.12.2 Gestures	40
7.12.3 Date & time	41
7.12.4 Reset options	42
7.12.5 About phone	43
Chapter 8. Introduction of typical applications	45
8.1 Scanner	45
8.2 System Update	51
8.3 Mobile Butler	56
8.4 Quick Configuration	64
8.4.1 Import	64
8.4.2 Export	67
8.5 Feature Key Settings	69
8.5.1 Fn Sticky Keys	70
8.5.2 Block P5 Function Key	70
8.5.3 Block P7 Function Key	70
8.5.4 Touchscreen Glove Mode	70
8.5.5 Disable Status Bar Dropdown	70
8.5.6 Prohibit Passing Scan Key Value to Apps	71
8.5.7 Show Scan Float Button	71
8.5.8 Hardware Keyboard Tones	71

8.5.9 Prohibit Fall Detection	71
8.6 Digital Certificates Whitelist	71
8.7 Hotkey Settings	75
Chapter 9. Troubleshooting	78
Optional Accessories	80

Chapter 1. Instructions for Use

1.1 Cautions for laser scanning engines



Laser radiation! Do not look directly at the laser beam.

1.2 Cautions for safety

Use only the batteries and chargers specified by our company for your device. Using other products may result in battery leakage, overheating, bursting and fire.

Do not short the charger as this may cause electric shock, smoke and damage to the charger.

Do not use the charger with a damaged power cord, as this may lead to fire and electric shock.

Do not disassemble or modify the charger as this may result in personal injury, electrical shock, fire and damage to the charger.

Grasp the charger when unplugging; pulling the power cord may damage the cord and cause electrical shock and fire.

Clean the device, battery and charger with a soft, dry cloth.

Do not wipe the equipment with alcohol, thinner or benzene solutions.

1.3 Cautions for maintenance

This product is waterproof and dustproof, but should not be operated in extreme high temperature, low temperature or wet environment. Please refer to the product specifications for temperature and humidity standards.

Pressing the screen with force may damage the screen. Do not touch the screen with a resistive touchscreen pen to avoid scratching or damaging the screen. To clean the screen, spray a small amount of commercial LCD cleaner on a soft cloth.



Do not spray cleaner directly on the screen.

Do not use any chemical cleaner to wipe the LCD screen.

Keep the scan window clean and free of smudges and do not carve or scrape with sharp objects.

If this product is not used for long, be sure to download the data to your computer for storage.

It will take a long time to charge the battery when the device is used for the first time or reused after long storage.

If there is a malfunction, write down the information about the malfunction and contact the service personnel.

Chapter 2. Appearance

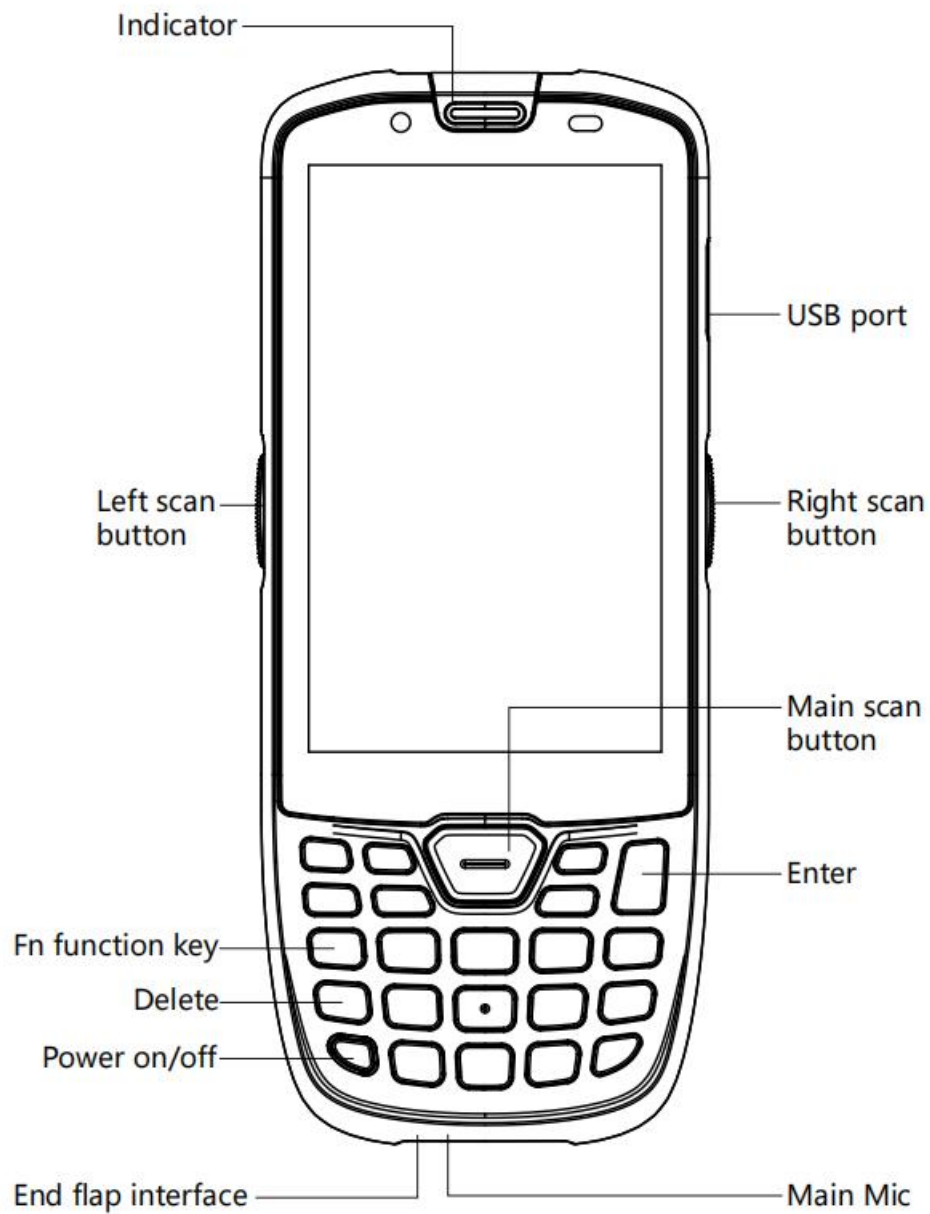


Figure 2- 1 Front View

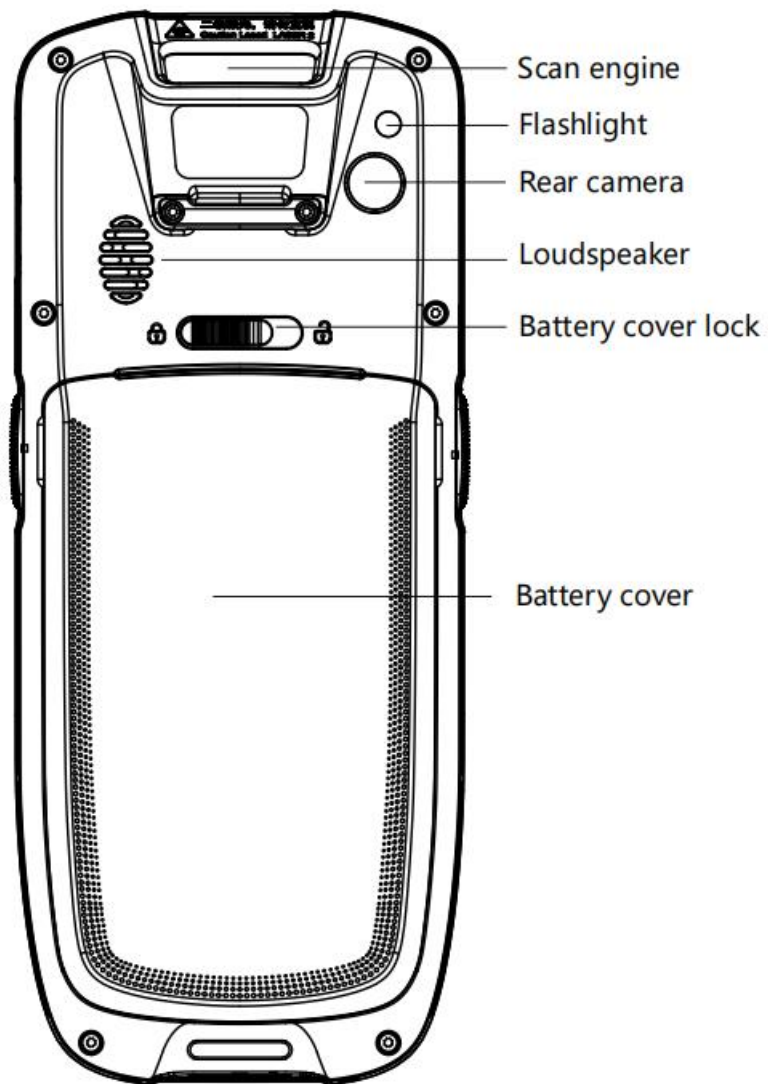














 
 


 

Figure 2-2 Back View











 

Chapter 3. Keyboard

The keyboard on the AUTOID® 3P device is 23 keys + 2 side scan keys, and there are 3 buttons on the touchscreen (Menu, Home, Back).

Keys Description:

Table 3- 1 Keys Description

KEY	Main Function	Description
	Home button	Press  to return to Home screen.
	Task button	Press  to display opened applications.
	Back button	Press  to return to the parent screen or exit the application. In the text entry screen, press  to close the on-screen keyboard
	Scan key	Scan key for barcode scan.
	Side-Scan key	Scan keyfor barcode scan.
	Delete key	Delete
	Direction key: up	Becomes Backlight+ in Fn mode
	Direction key: down	Becomes Backlight- in Fn mode
	Direction key: left	Becomes Volume+ in Fn mode
	Direction key: right	Becomes Volume- in Fn mode Long- press together with Power key for screen shot function.
	Enter key	Confirm
	Fn Lock key	Lock keyboard input for Fn function input
	1	Number 1, Symbol@:/ Becomes F1 key in Fn mode
	2	Number 2, Letters A.B.C Becomes F1 key in Fn mode

	3	Number 3, Letters D.E.F Becomes F1 key in Fn mode
	4	Number 4, Letters G.H.I Becomes F1 key in Fn mode
	5	Number 5, Letters J.K.L Becomes F1 key in Fn mode
	6	Number 6, Letters M.N.O Becomes F1 key in Fn mode
	7	Number 7, Letters P.Q.R.S Becomes F1 key in Fn mode
	8	Number 8, Letters T.U.V Becomes F1 key in Fn mode
	9	Number 9, Letters W.X.Y.Z Becomes F1 key in Fn mode
	Custom keys	Configurable as per user requirements
	Power button	Sleep/wake up, shutdown
	.	Symbol . Becomes * key in Fn mode
	0	Number 0 Becomes Space in Fn mode
	#	Enter factory pattern/the same function as the # key on the mobile phone

Chapter 4. Quick Start Guide

4.1 Power on

Take out the device and the battery, slide the battery cover lock to open state, install the battery and close the battery cover, then slide the battery lock to close the cover, and press and hold the power button to turn on the device.

4.2 First use

The first time you boot up or open some applications, a quick tutorial will pop up to guide you through using your PDA.

When in the system working state, press the power button to wake up the device. When in the sleep state, press the power button to wake up the system and light up the screen.

4.3 Power off

Press and hold the power button to open an option menu, tap Power Off to shut down the device.

4.4 Restart

When the device is powered on under non-sleep state, press and hold the power button for 2s to open the power menu, then select Restart and tap Confirm to turn off and restart the device normally.

4.5 Install SIM card

Follow the instructions below to install Nano SIM card:

Remove the battery, and then insert the Nano SIM card following the directional indications on the label.

4.6 Install SD card

Follow the instructions below to install SD card:

Remove the battery, the up card holder is the memory card holder, and follow the direction on the label to insert the memory card.

4.7 Install battery and battery cover

Slide the battery cover lock to the right side to unlock, remove the cover and then the battery. Install the battery and cover as labelled, slide the cover lock to the left side to lock up.

Chapter 5. About Charging

Since the battery only has a small amount of power for testing before shipping out of the factory, it must be charged first when received before use. The device can be charged via a USB Cable, Single Charging Dock or Tetra Charging Dock.

5.1 Charging time

Battery: first charge takes about 3 hours charging via the adapter. The LED lights up in solid red when charging and turns solid green when fully charged.

5.2 Charging temperature

The best operating temperature is room temperature 18~25°C.

Batteries will not be charged at temperatures below 0°C or above 50°C.

5.3 Battery charging

The battery can also be charged separately using a Single Charging Dock for the device or a Tetra Charging Dock for the battery.

Tip: If this product is not used for long, please charge the device at least once every two months.

5.4 Cautions for battery use

- If the battery is exhausted, it is normal that the device may not power on immediately when plugged in the charger. Please keep charging for a period of time before powering on.
- The battery can be recharged repeatedly, but is consumable and should be replaced when the device standby time is significantly reduced.
- The charging time of the battery varies according to the temperature conditions and battery usage, so please charge the battery within a reasonable temperature.
- When the battery level is low, the device will pop up a low battery alert.
- When the battery level is too low, the device will automatically turn off.

5.5 LED indicators

The LED indicator at the top of the machine screen indicates the state and charging state of the machine battery according to different colors:

- If the USB or charging adapter is not inserted, the indicator in the upper part of the screen blinks red, indicating that the battery is low. Please charge it in time.
- If the USB or charging adapter is inserted, the indicator in the upper part of the screen is steady red, indicating that the battery is being charged.
- If the USB or charging adapter is inserted, the indicator on the top of the screen is steady green, indicating that the battery is fully charged.
- When the bar code is scanned, the indicator at the top of the screen blinks green once, indicating that the bar code is read.

Chapter 6. Main screen

AUTOID® 3P has two home screens, configurable at your preference.

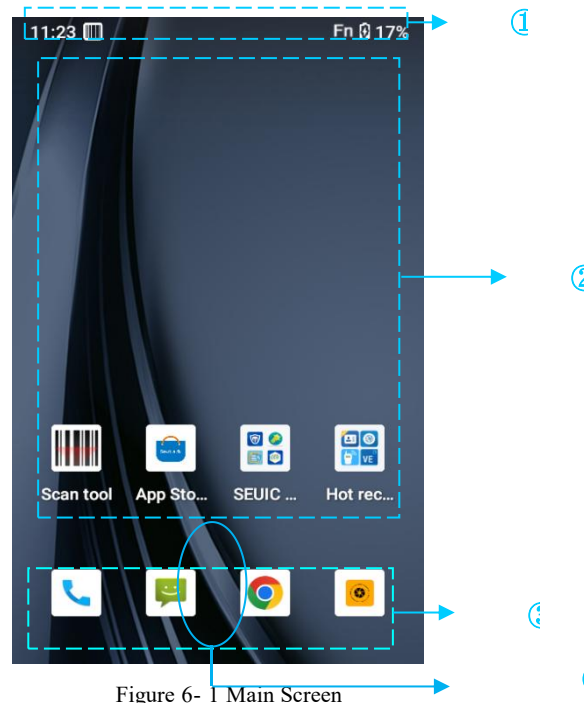


Figure 6- 1 Main Screen

Table 6- 1 Main Screen Items

①	Status Bar: displays notifications and status icons.
②	Display Area: used to place application icons, desktop folders and widgets.
③	Shortcut Bar: tap to enter the corresponding application.
④	Application Tray: slide up to enter the main screen to view all applications.

6.1 Status bar icons

The status bar icons and the notification bar icons are located at the top of the screen and display device status information and notifications, as shown in the table below.
























Icon	Description	Icon	Description
	Available WLAN network detected		No SIM card
	Connected to WLAN network		Signal strength
	Portable WLAN enabled		Mobile network connected
	Vibration mode		Airplane mode
	Missed call		Scan ON
	New message		Battery charging
	Screenshot captured		Battery fully charged
	Alarm clock		Low battery
	Preparing the microSD card		Multiple notification icons, out of display range
	Uploading data		GPS locating
	USB debugging		Downloading data


Table 6-2 Status Icons and Notification Bar Icons

Chapter 7. Settings

7.1 Network & internet

Find this icon:

-> Settings 

-> Network & internet 

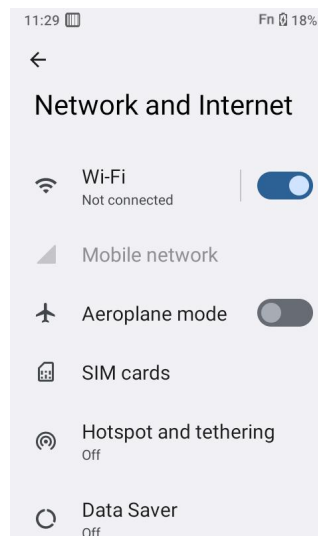


Figure 7- 1 Network & internet

7.1.1 WLAN

Wi-Fi 2.4G provides a wireless network access range of up to 450 feet (150m), and Wi-Fi 5G provides a range of up to 300 feet (100m) (Note: industrial-grade APs, open space). To use the Wi-Fi on your device, you must connect to a wireless access point or hotspot.

Note: Wi-Fi signal availability and coverage depends on the signal number, the infrastructure, and the objects that the signal penetrates.

Turn on Wi-Fi and connect to a wireless network

1. Tap the WLAN Off/On button to enable Wi- Fi, And the system automatically

scans for available wireless networks.

2. The Wi-Fi network list will then display the network names and security settings (open or encrypted) of the discovered Wi-Fi networks.

3. Tap one of the Wi-Fi networks to connect. When you select an open network, you are automatically connected to that network. If you select an encrypted network,

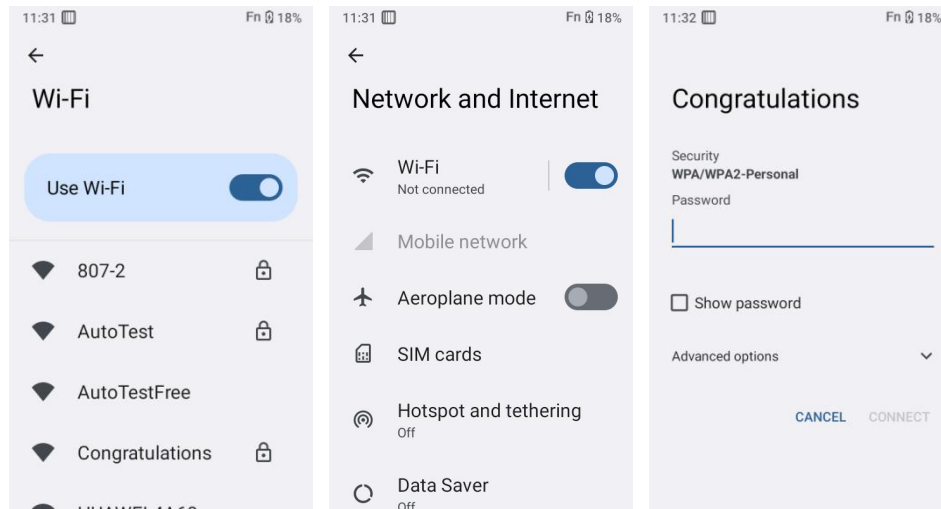


Figure 7-2 Wi-Fi menu

4. WLAN Frequency Band ([WLAN Advanced Settings] --> [WLAN Frequency Band]), when you choose to use only 5GHz/2.4GHz, you can only search for APs in 5GHz/2.4GHz.

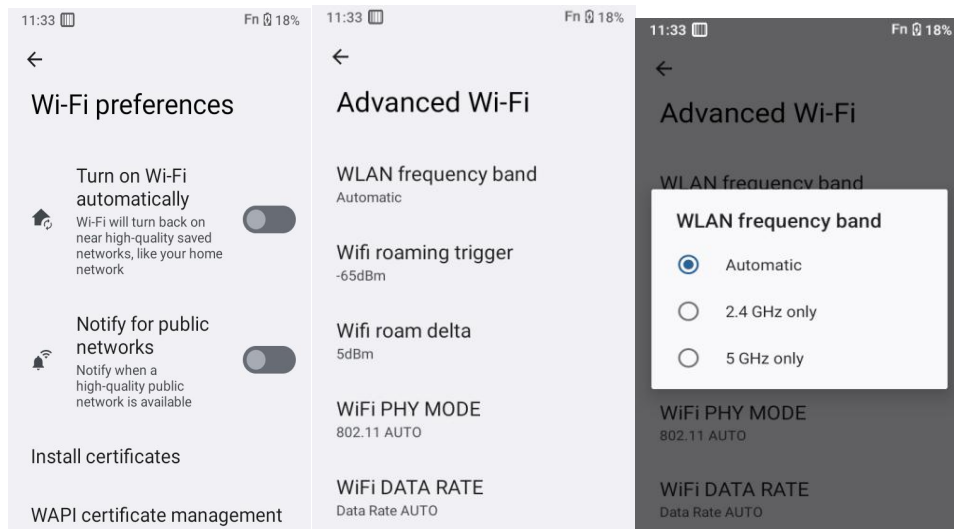


Figure 7-3 WLAN Frequency Bands

5. Roaming RSSI Threshold and Roaming RSSI Difference can be set on demand through Advanced Settings.

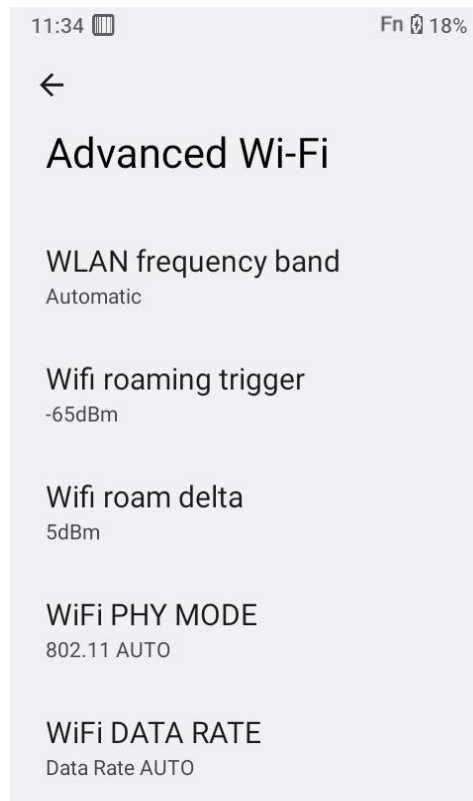


Figure 7-4 WLAN roaming settings

(1) Roaming RSSI Threshold: if the actual signal strength of the current connect AP is less than the threshold value (premise: in a roaming environment), then the roaming will be triggered. As shown in the figure, the roaming threshold value is set to -65 dBm, when the signal strength is lower than that, the roaming mechanism is triggered.

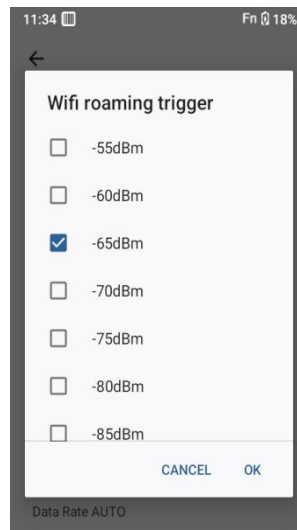


Figure 7-5 Roaming Threshold

(2) Roaming RSSI Difference: when the difference of signal strength between the two APs reaches the set value, roaming is triggered to connect to the AP with better signal strength. As shown in the figure, when the difference of signal strength between the two APs is greater than 5dBm (also need to reach the Roaming RSSI Threshold standard), roaming can start normally.

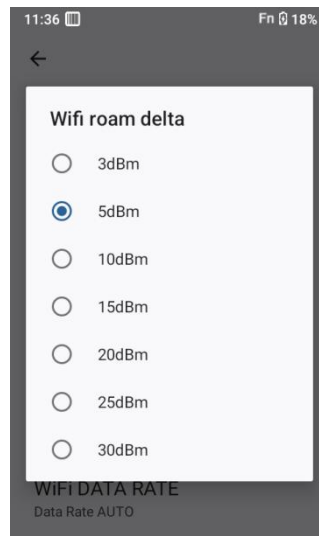


Figure 7-6 Roaming Increment

WIFI Operating Mode configuration supports configuring fixed operating mode (a/b/g/n/ac), which by default is 802.11 AUTO.

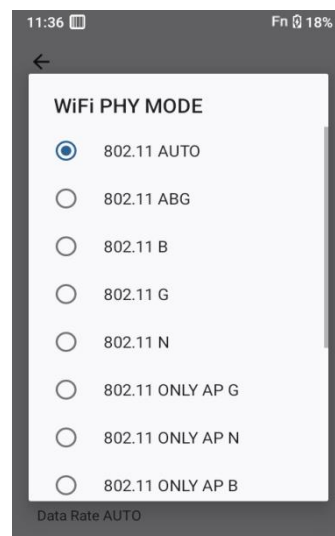


Figure 7-7 WIFI Work Mode Configuration

7. Set Power Saving Mode. There are three modes: power saving, full power, full power but power saving when asleep. The default is power saving mode. [Power Saving] means always take power saving measures; [Full Power] means always take active mode and consume more power; [Maximum Performance] means have the best performance experience but consume the most power. As shown below:

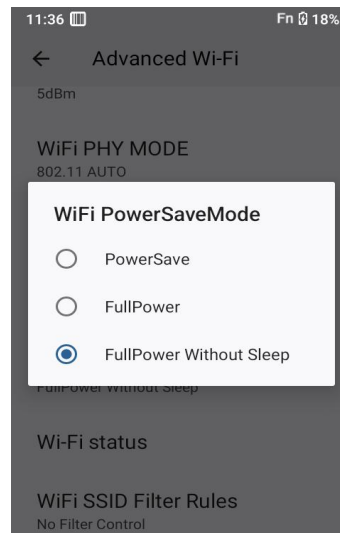


Figure 7-8 Power Saving Mode

8. Black/White List Policy and Configure Black/White List

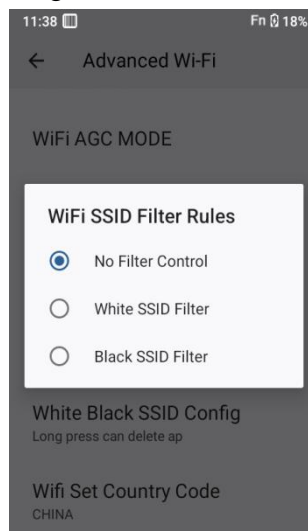


Figure 7-9 Black/White List Policy

(2) Configure Black/White List includes blacklist management and whitelist management.

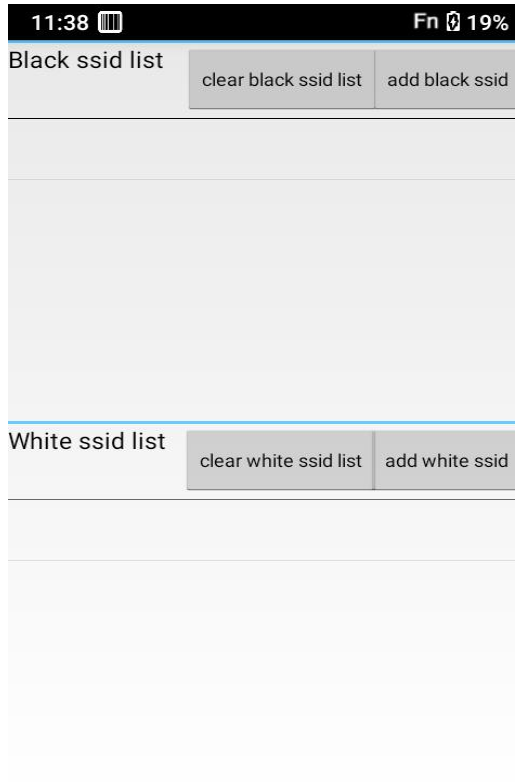



Figure 7- 10 Configure Black/White List

Note: When the device is connected to a wireless network, the status bar

displays the Wi-Fi icon() and the approximate signal strength (number of lit bars).

If you touch the wireless network to which the device is currently connected, the Wi-Fi network name, status, signal strength, frequency, security information, MAC address, IP address, gateway, subnet mask, DNS, connection speed, and IPv6 address are displayed.

If you want to remove a wireless network setting on your device, tap on the connected AP and select Forget, which will delete this AP as shown in the image to the right

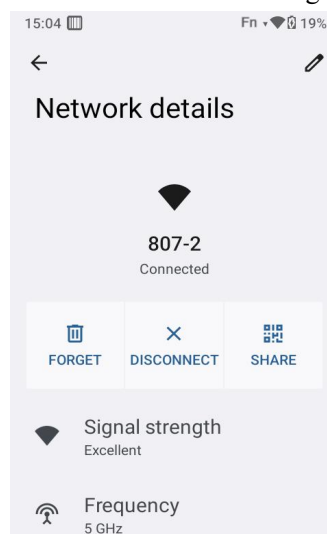


Figure 7- 11 Deleting or Modifying a Network

Note: Once the Wi-Fi is switched on and off again, the device does not need to re-enter the appropriate password to connect to a previously connected encrypted wireless network. The Wi-Fi network will search for itself, not requiring additional steps to connect to the Wi-Fi network.

Connect to other Wi-Fi networks

- In the Wi-Fi screen, tap Scan. The Wi-Fi networks discovered will be displayed in the Wi-Fi network list.
- Tap another Wi-Fi network to connect to that network.

7.1.2 Mobile network

1. Turn on mobile data network : [Settings] --> [Network & internet] --> [Mobile network].
If mobile data is enabled, related mobile data usage will be recorded and incur data costs.

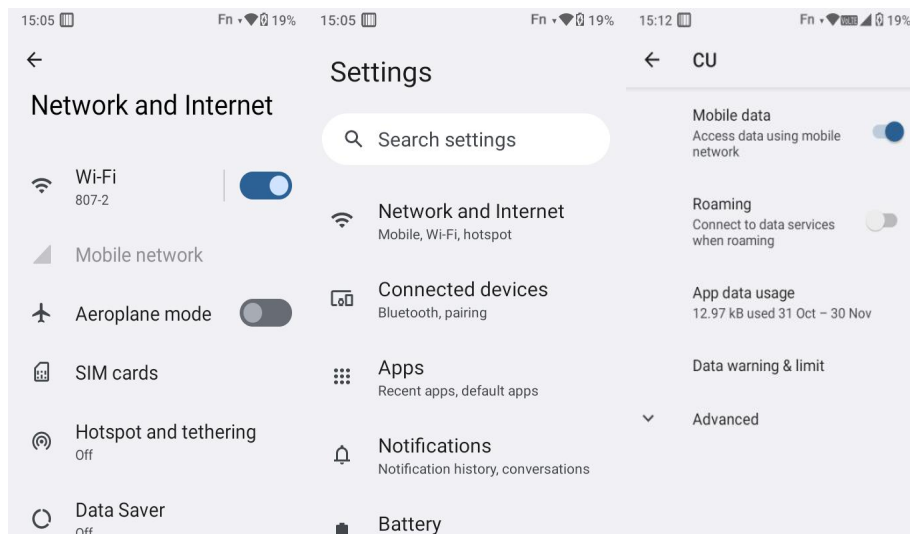


Figure 7- 12 Enable mobile network

2. Roaming: if enabled, data traffic can directly switch to roaming status when in a roaming environment.

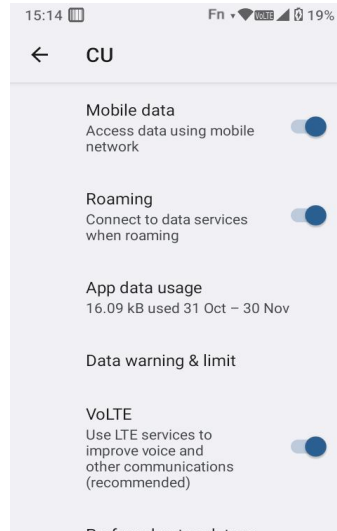
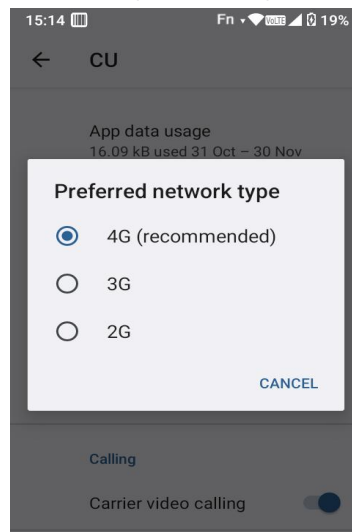


Figure 7- 13 Mobile data roaming

3. Network type: insert different SIM card, system automatically identifies the network type according to the SIM card type. The default network type is 4G (recommended).

After selecting the preferred network type, the taskbar will display the corresponding network signal indicator 2G=2G preferred, 3G=3G preferred, 4G=4G preferred. If a China Unicom card selects the network type 2G preferred, the device will forcefully downgrade to 2G network even if there is 3G signal coverage.






7- 14 Mobile network type selection

4. Access point names. Generally, China Mobile default is cmnet, China Unicom default is ctnet, as shown below:

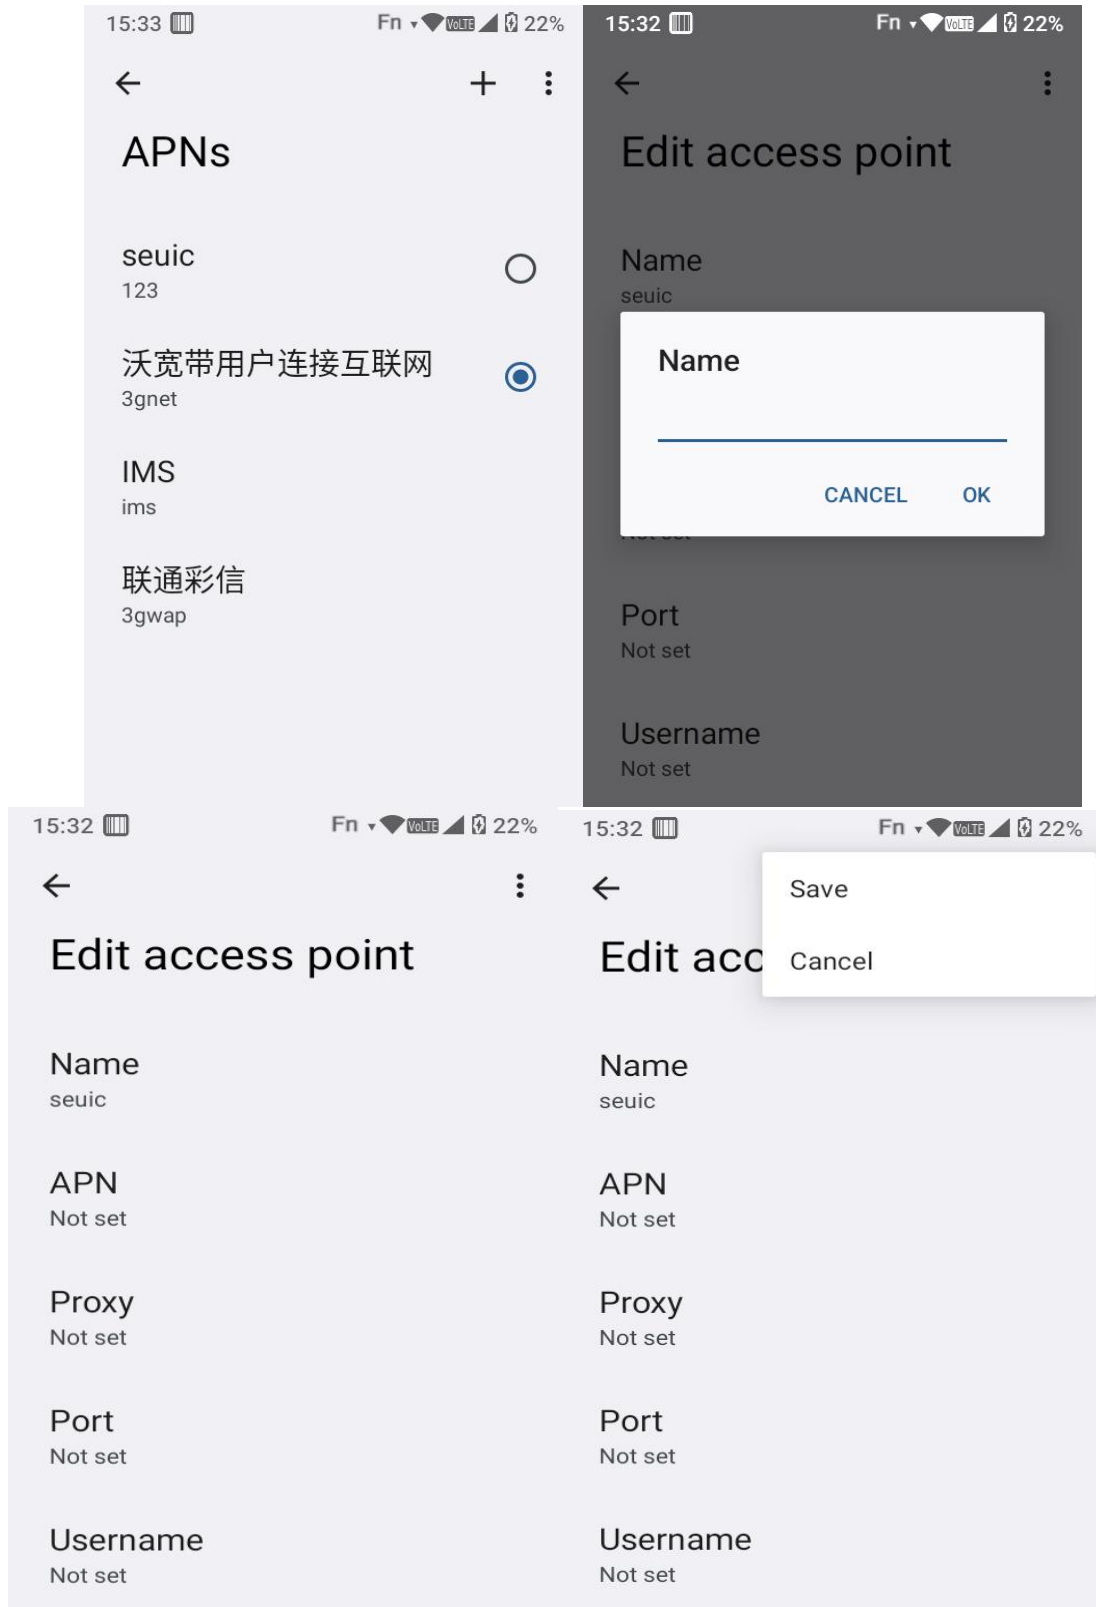


Figure 7- 15 Access Point Names APN

5. Add dedicated APN, tap  button, and tap New APN, then a pop-up interface will be shown as below, which generally requires adding the name (custom),

APN (network access point), user name, password, etc. Then press  button to select save or press the Back button directly to return to complete adding the config. If to modify or delete the added APN, tap to enter for modification, and press  button to save or delete, etc., as shown in the figure.

Note: When adding an APN, other options can be set according to the user's own access point requirements.



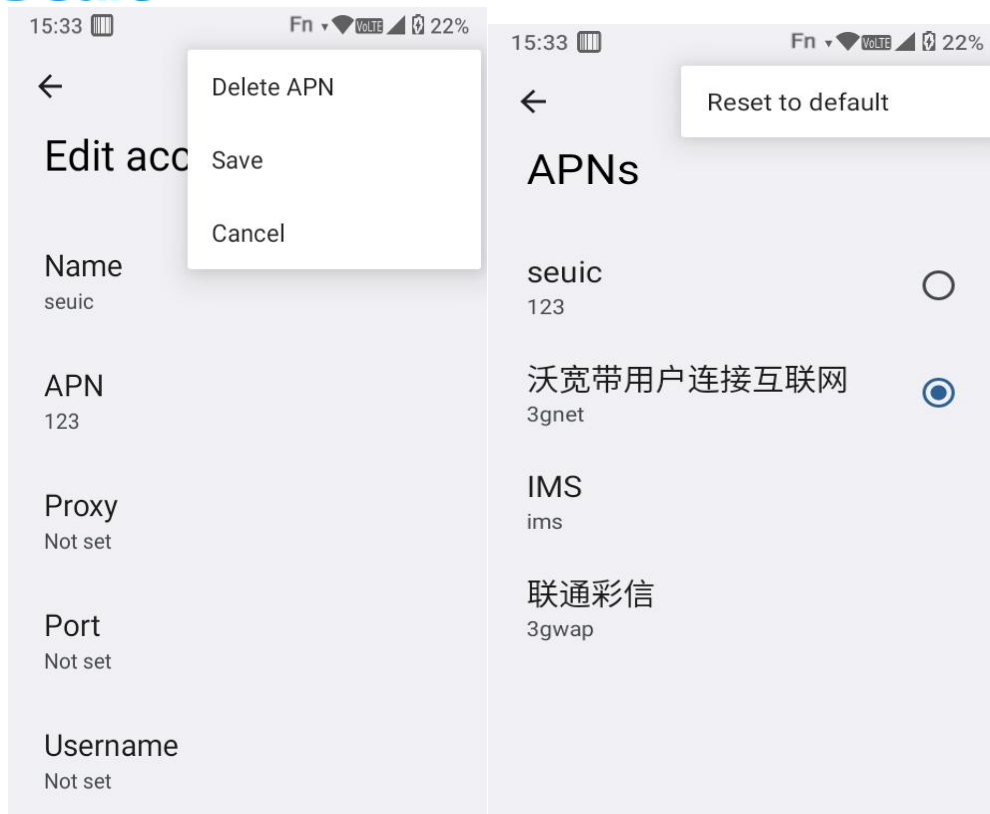


Figure 7- 16 Adding and Deleting APN

6. Network provider: searches for network provider resources in the current environment.

7.1.3 Data usage

Open mobile data to set the mobile data limit.

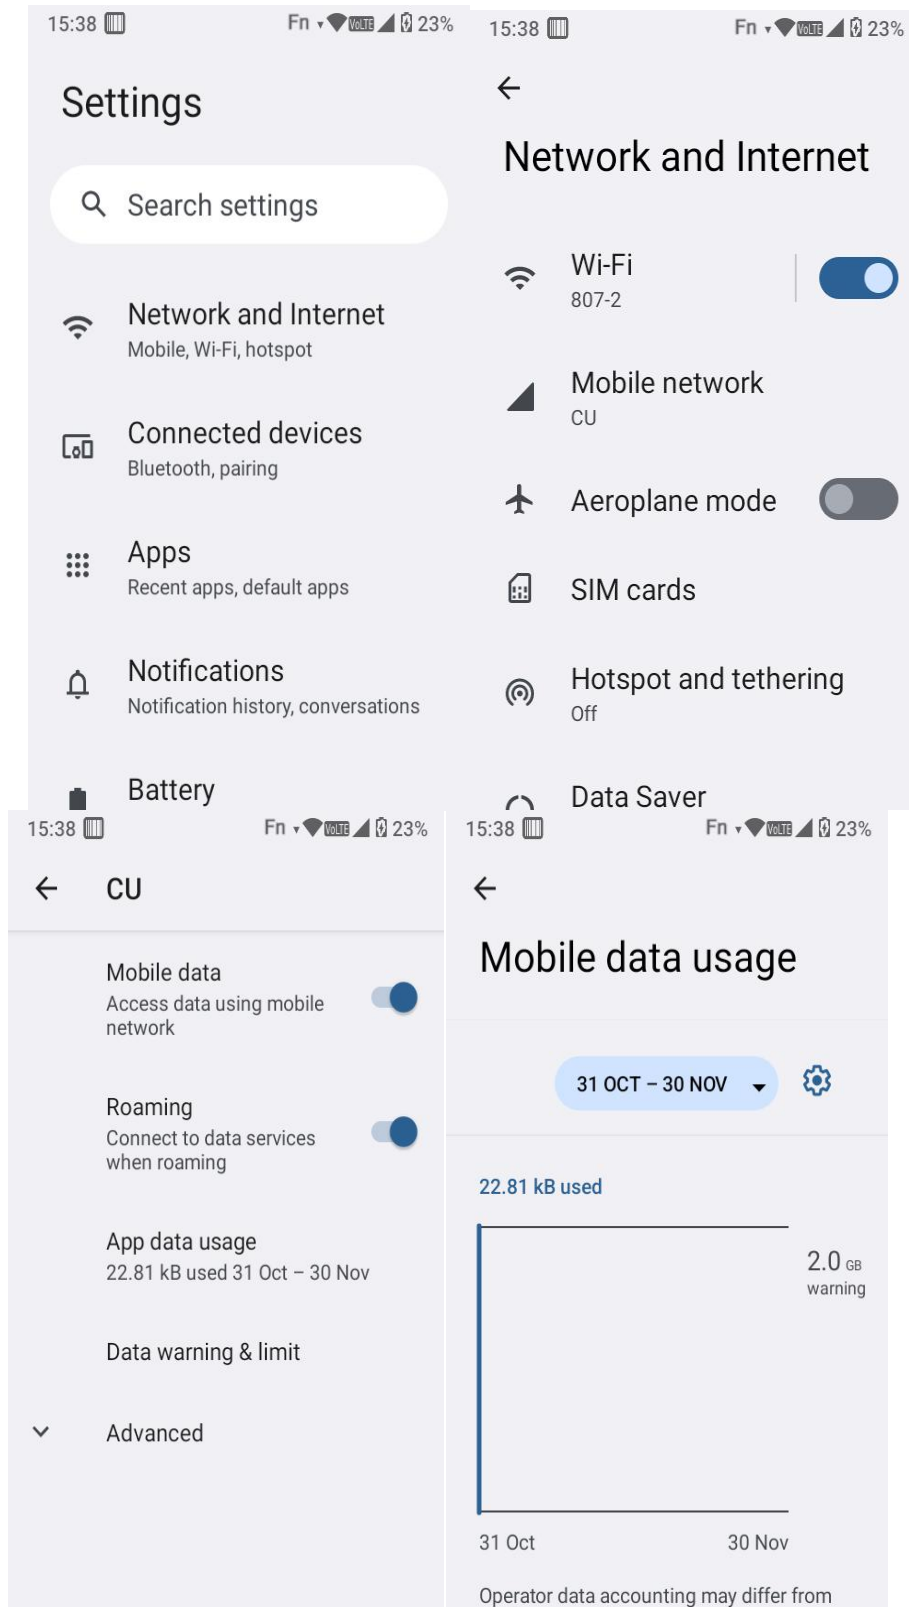


Figure 7- 17 Data usage

7.1.4 Hotspot & tethering

(1) Portable hotspot function, which uses this device as a Wi-Fi hotspot to provide signal access to cell phones and computers with Wi-Fi modules within a certain range.

(2) Settings --> Network & internet --> Hotspot & tethering --> WLAN Hotspot --> On, as shown below:



Figure 7- 18 Portable Hotspot Setting

(3) Configure a portable hotspot, as shown below:

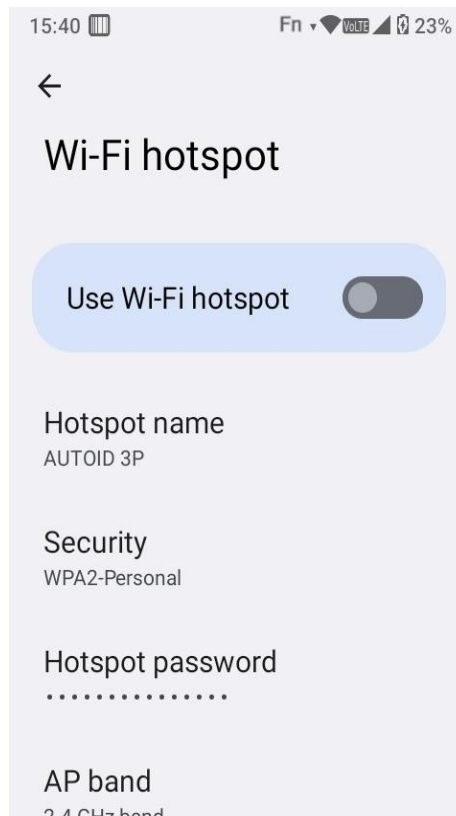


Figure 7- 19 Modify a WLAN Hotspot

(4) The other party can search for the hotspot, enter the corresponding password to share the hotspot network of the device.

7.1.5 VPN

After enabling VPN, you need to add a VPN private network (e.g., to access the company's internal file server and other shared resources). Then, no matter where you are, you can connect to the company's VPN server through the VPN client. You can dial through the VPN client after getting your VPN account, and access the company's shared resources once dialed successfully.

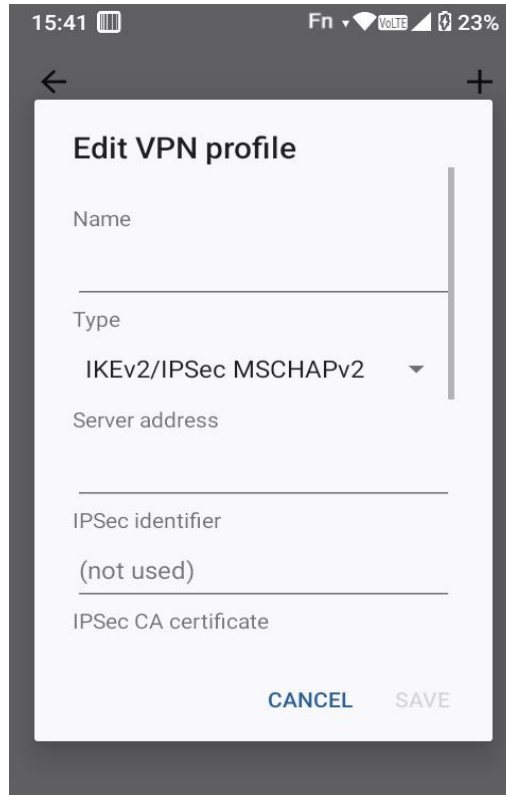



Figure 7-20 VPN Settings

7.1.6 Airplane mode

When the airplane mode is checked, the wireless module will automatically turn off.

7.2 Connected devices

Find this icon: 

-> Settings

->  Connected devices

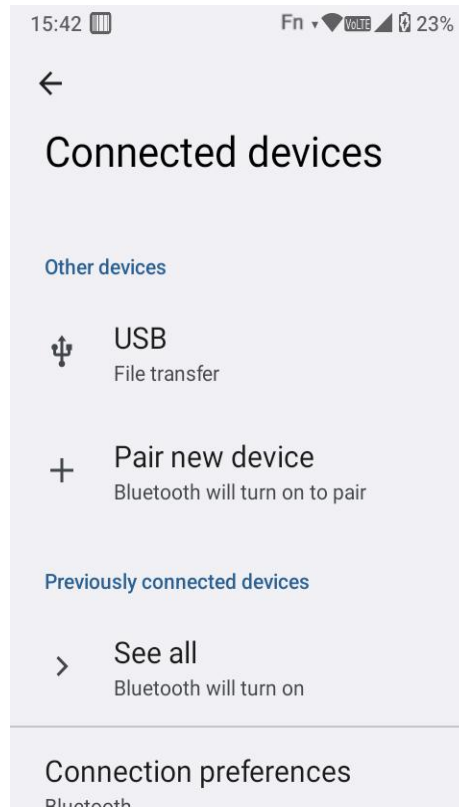




图 7-21 已连接的设备

7.3 Apps & notifications

Find this icon: 

-> Settings

->  Apps & notifications

Apps and notifications (recent apps, notifications, app permissions, default apps, emergency alerts, special app permissions).

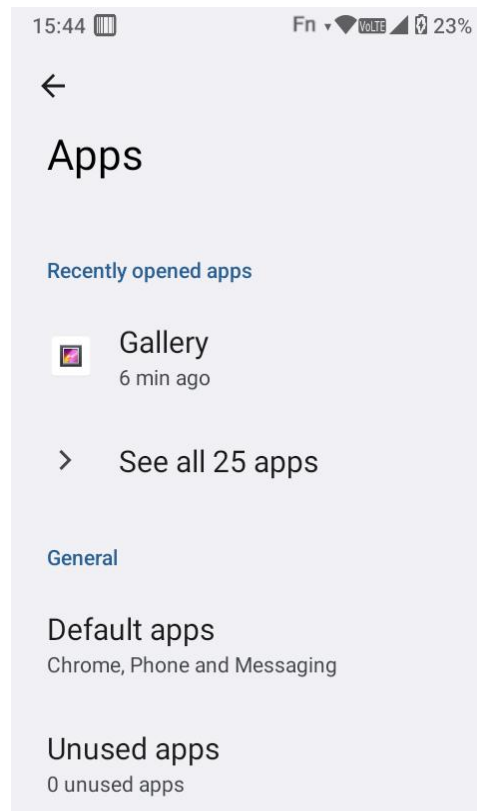



Figure 7-27 Apps & Notifications

7.4 Battery

Find this icon: 

-> Settings

->  Battery



Figure 7-28 Battery

7.5 Display

Find this icon:



-> Settings



-> Display

1. Brightness level : move the cursor bar left and right to adjust the backlight. [Adaptive brightness]: optimize the brightness according to the ambient light conditions.

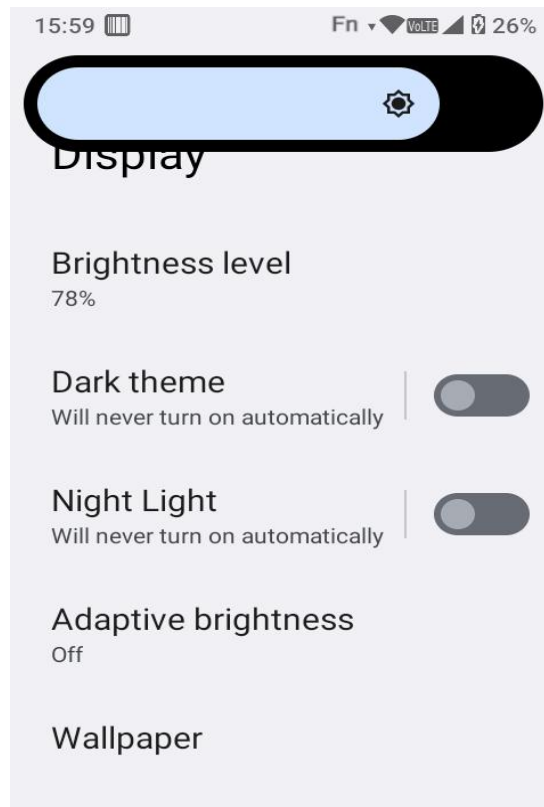


Figure 7-29 Display

2. Wallpaper: After entering, you can freely modify the wallpaper source as desired. [Dynamic wallpaper] : system built-in default dynamic wallpapers. [Gallery] : photo albums or pictures on the memory card. [Wallpaper] : system built-in default wallpapers.

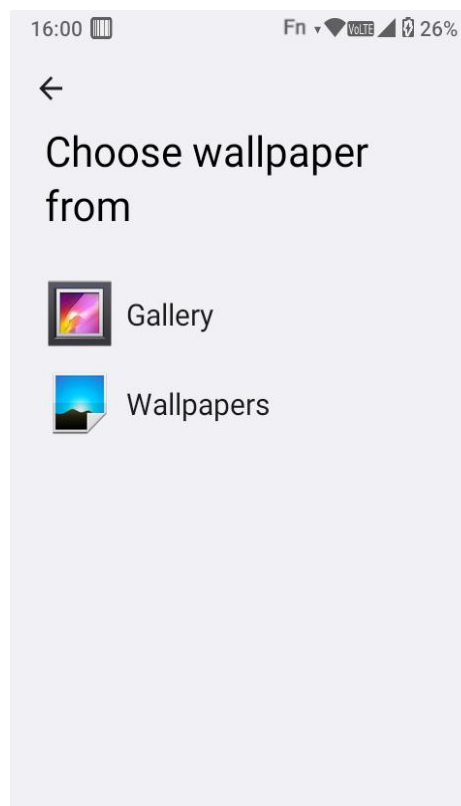


Figure 7-30 Wallpaper

3. Screen timeout : sets the timeout before system sleep. Upon the set time, the system will automatically sleep.

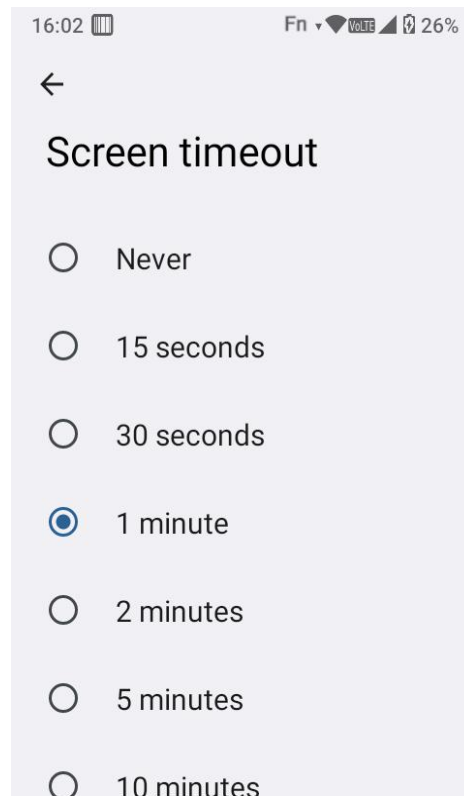


Figure 7-31 Dormancy

4. Font size, adjust the system font size according to your needs.

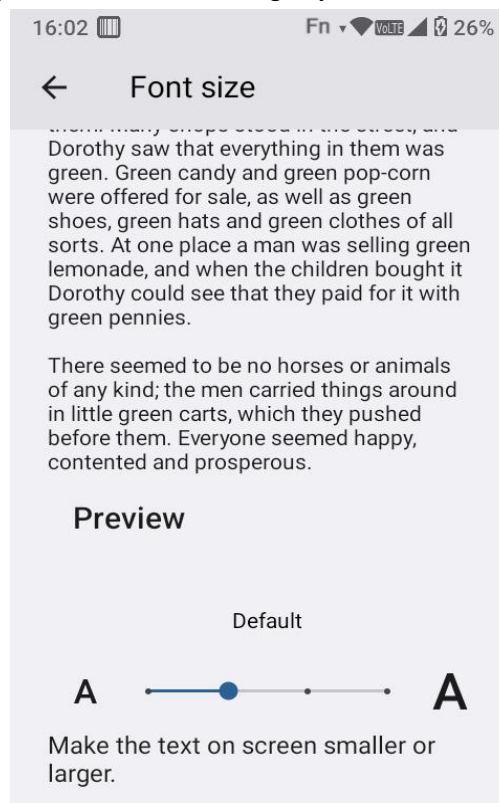


Figure 7-32 Fonts

7.6 Sound

Find this icon:

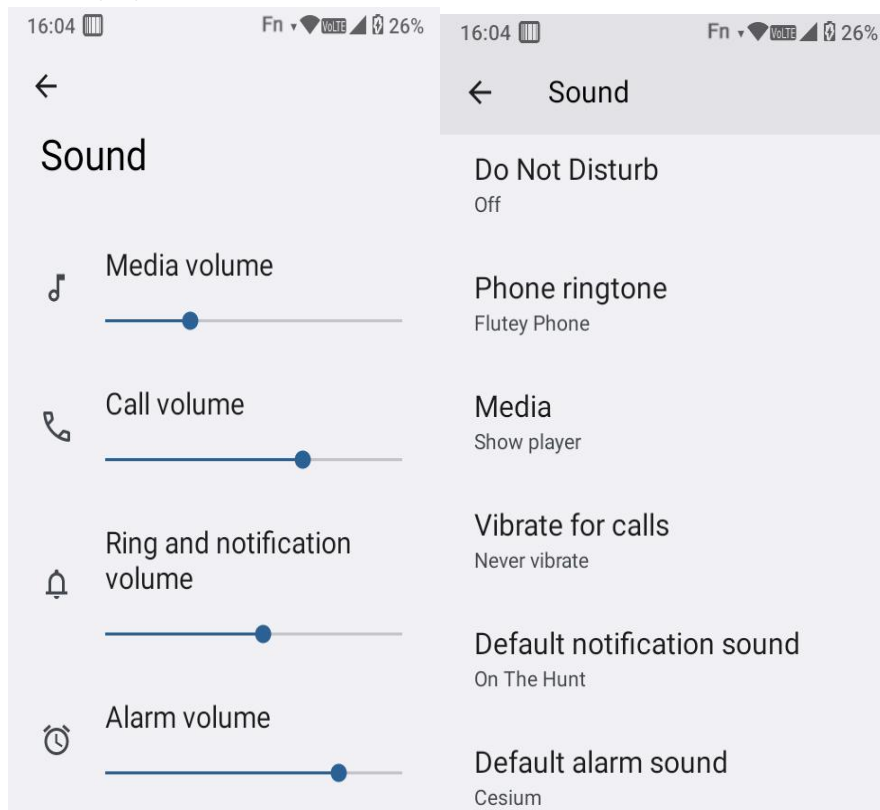


-> Settings



-> Sound

Settings for volume, phone ring tone and default notification tone, where you can also turn on/off to enable/disable ringtone and vibration for incoming calls, dial pad tones, screen locking sounds, charging sounds, touch sounds and touch vibration, as shown in below:



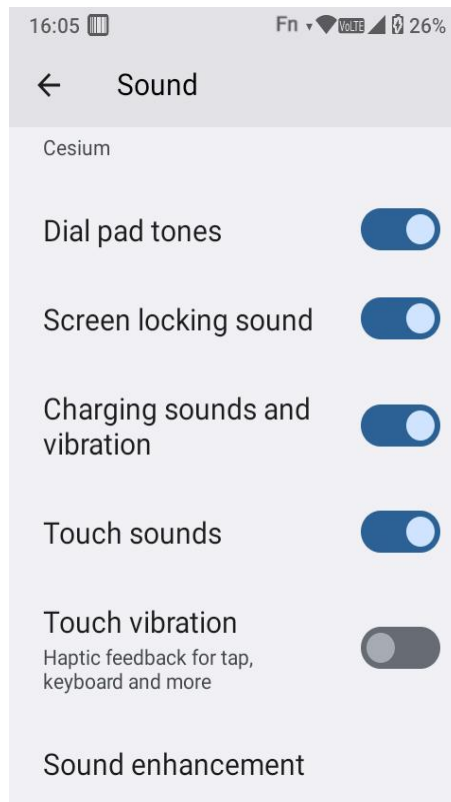



Figure 7-34 Sounds and Notifications

7.7 Storage

Find this icon: 

-> Settings

->  Storage

You can view the available internal storage space, SD card storage space, and external USB flash drive storage space.

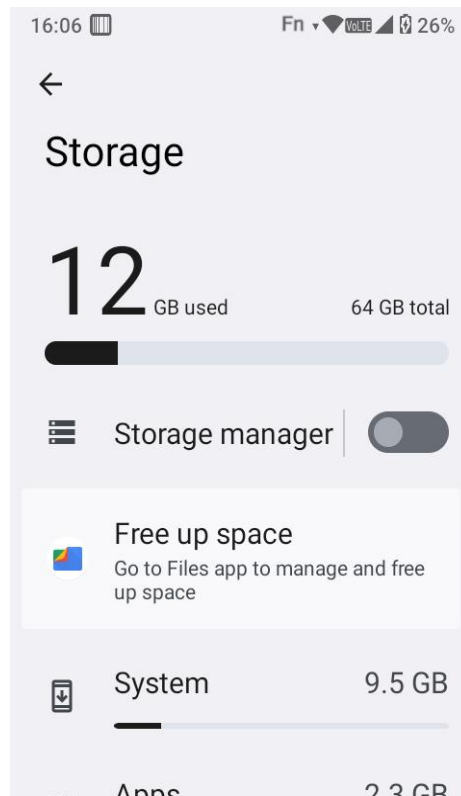



Figure 7-35 Storage

7.8 Location

Find this icon: 

-> Settings

->  Location

1. Turn on Use Location to enable GPS locating function. You can download third-party locating software's.

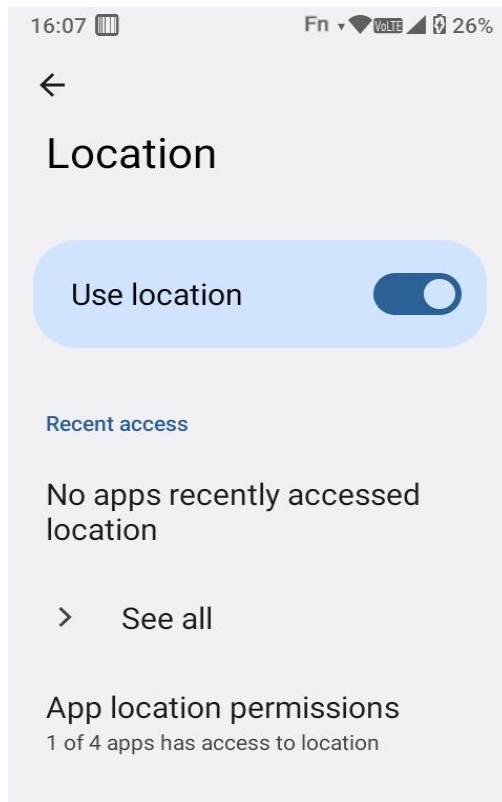



Figure 7-31 Location Information

7.9 Security

Find this icon: 

-> Settings

->  Security

Set screen lock mode, device admin apps, unknown source application installation password settings, SIM card lock, screen pinning, etc.

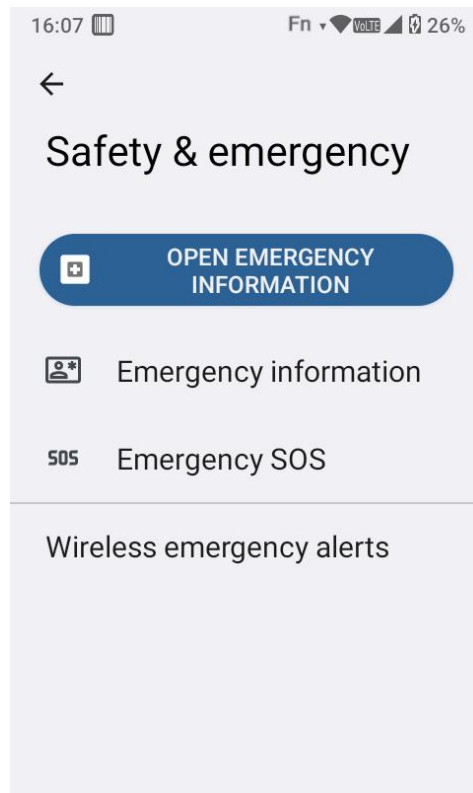


Figure 7-32 Safety and Emergency Situations

7.10 Password and Account

Find this icon:



->Settings



-> account

Establish an account and synchronize information (you can synchronize contact information, calendar, etc., to the cloud of other products, you need to set up an account and server side).

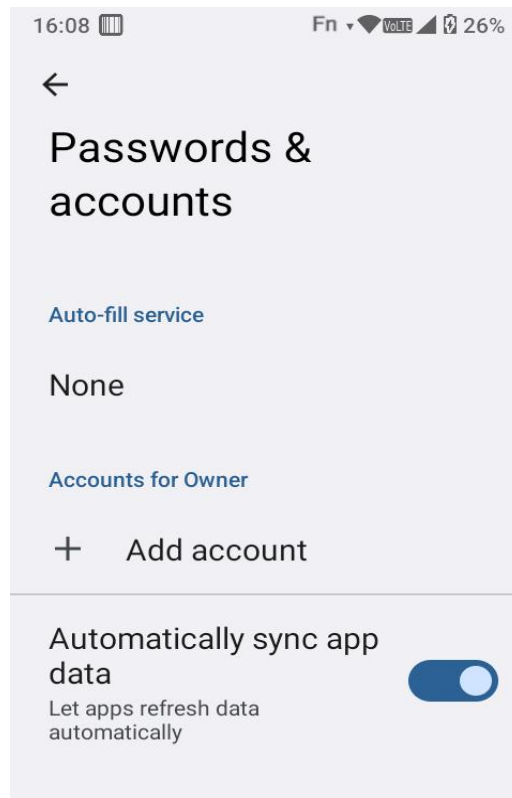



Figure 7-33 Users and Accounts

7.11 Accessibility

Find this icon: 

-> Settings

->  Accessibility

Here you can set up the system, caption, magnification, large font size, high-contrast text, power button ends call, auto-rotate screen, speak your password, accessibility shortcuts, text-to-speech (TTS) output, and touch & hold delay.

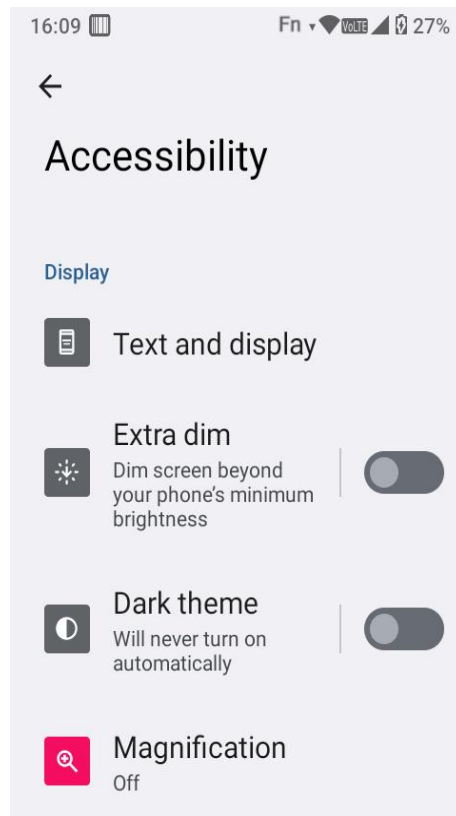



Figure 7-39 Accessibility

7.12 System

Find this icon: 

-> Settings

->  System

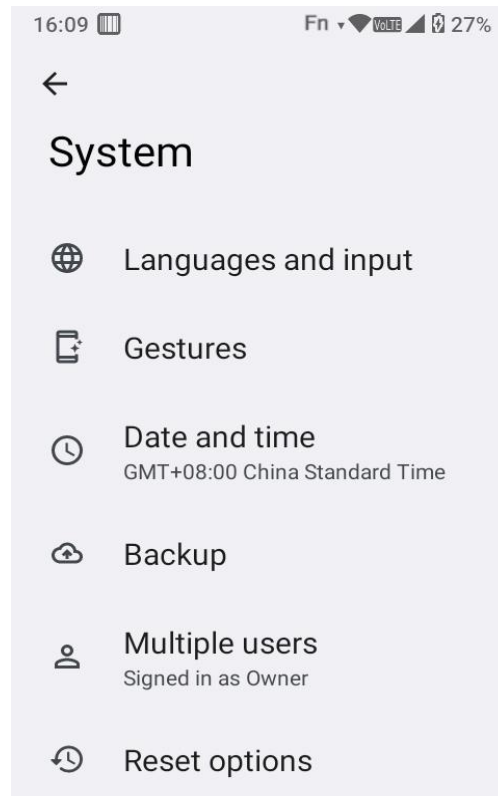


Figure 7-40 System

7.12.1 Languages & input

Select your language, choose your preferred keyboard and input method, spell check tool, autofill service, personal dictionary, pointer speed, and text-to-speech (TTS) output.

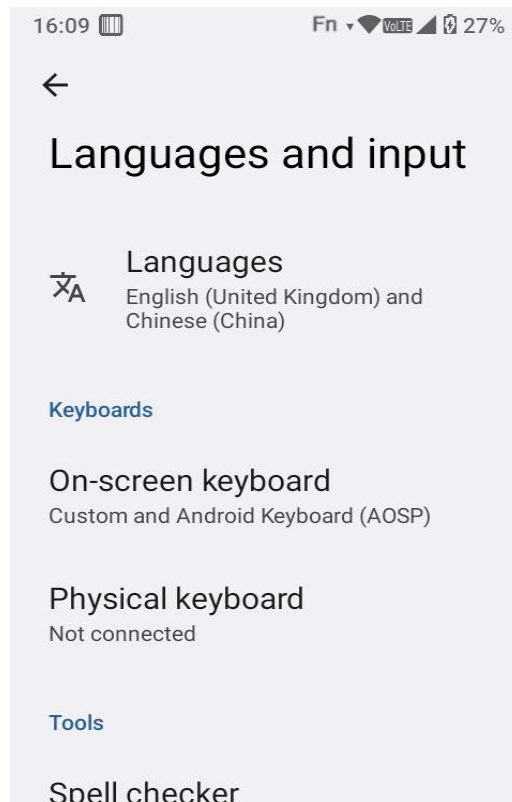


Figure 7-41 Languages & Input

7.12.2 Gestures

If enabled, press the power and volume-up buttons (downwards-arrow and right-arrow buttons in FN mode) simultaneously to switch to selected mode.

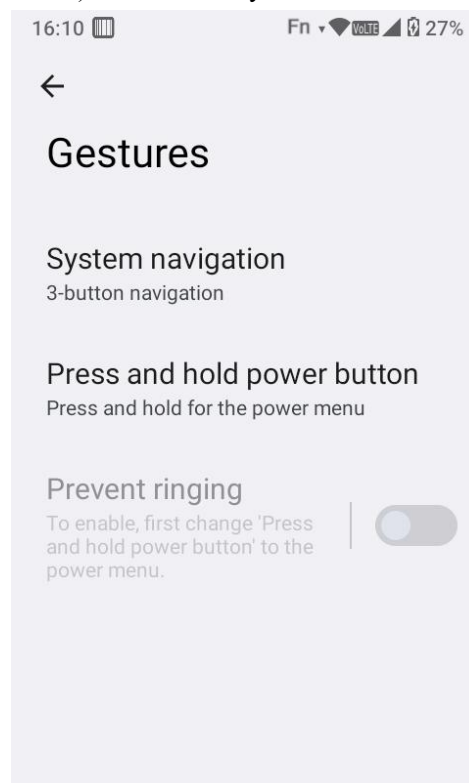


Figure 7-42 Gestures

7.12.3 Date & time

You can use network-provided time or time zone, or manually set the date and time and select the time zone. You can also select the format in which the time and date are displayed.

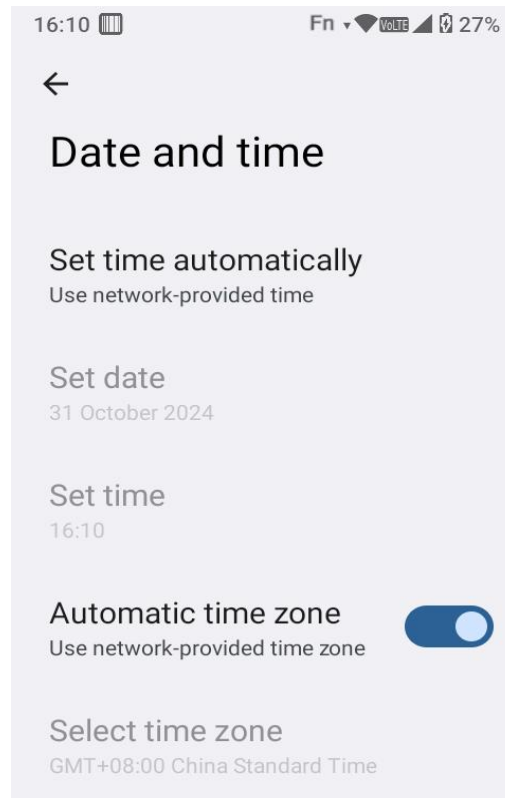


Figure 7-43 Date & Time

7.12.4 Reset options

Reset WLAN, mobile data network& reset app preferences, and erase all data (factory reset)

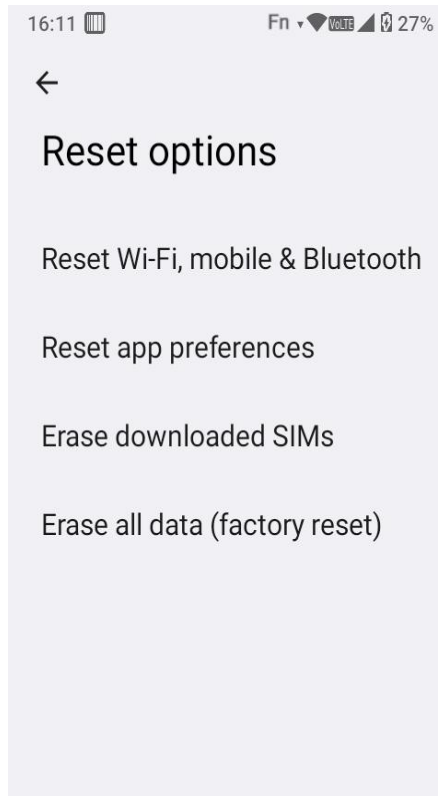


Figure 7-44 Reset options

7.12.5 About phone

Device details.

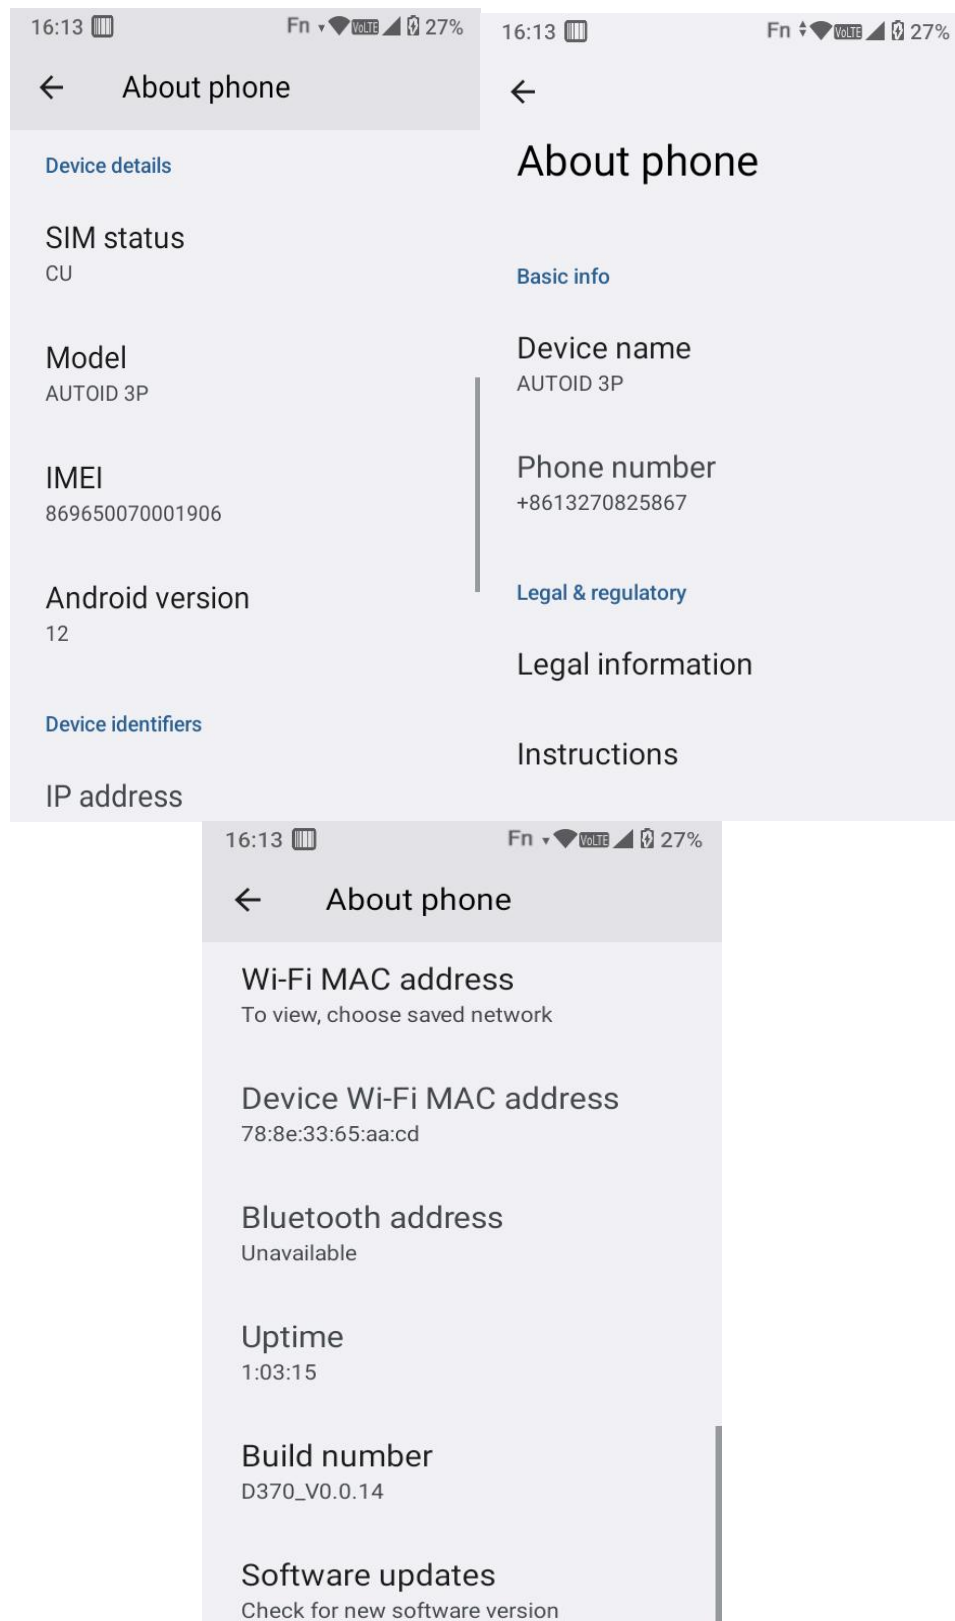



Figure 7-45 About Phone

1. Device name
2. Phone number
3. Emergency information (info & contacts for Owner)
4. Legal information: third-party licenses, system Web View licenses, wallpapers
5. SIM status: network, phone number on SIM, mobile network state, service state, signal strength, mobile voice network type, mobile data network type, roaming, EID
6. Model & hardware: model, serial number, device serial number, user-defined serial number, function number
7. IMEI: IMEI, IMEI SV
8. Android version: 10
9. IP address
10. WLAN MAC address
11. Build number

Chapter 8. Introduction of typical applications

8.1 Scanner

1. Find this icon , enter the application interface and tap on Scan for scanning.

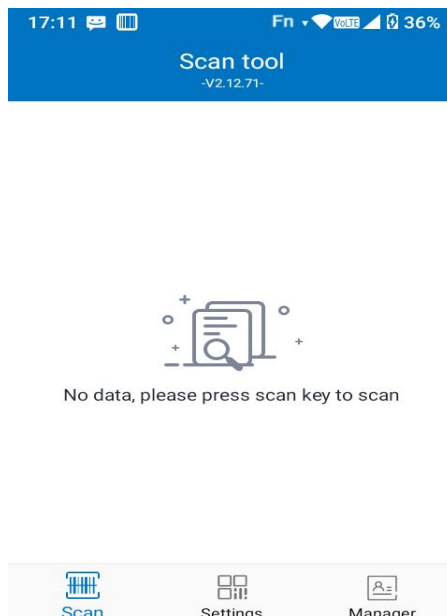


Figure 8- 1 Scanner Main Interface

2. Select [Barcode Settings] to enter interface to set the desired barcode type.

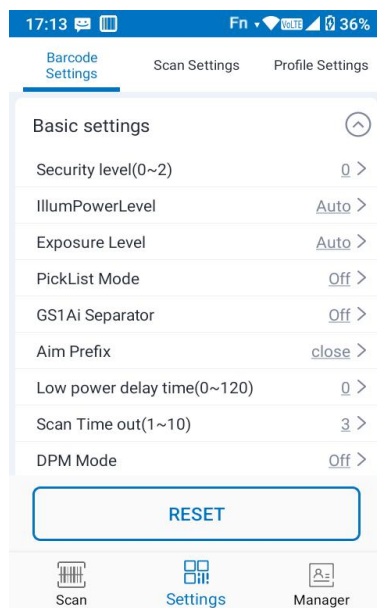


Figure 8-2 Barcode settings

3. 2D barcode: open Basic Settings to configure scanning security level, lighting, duration of light, exposure, focus mode, etc. : (as shown in Figure 8-4 below)

Note: There are differences in the basic settings for different models of scanner. Please refer to the specific settings of your model.

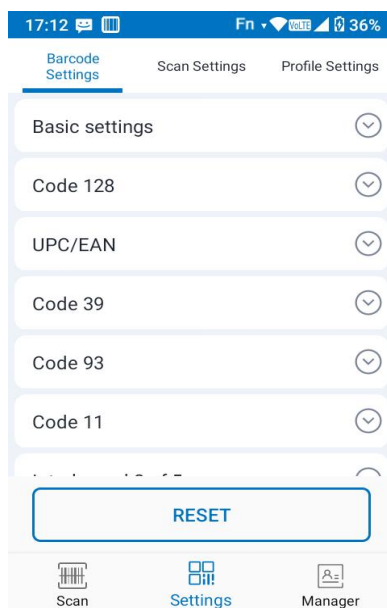
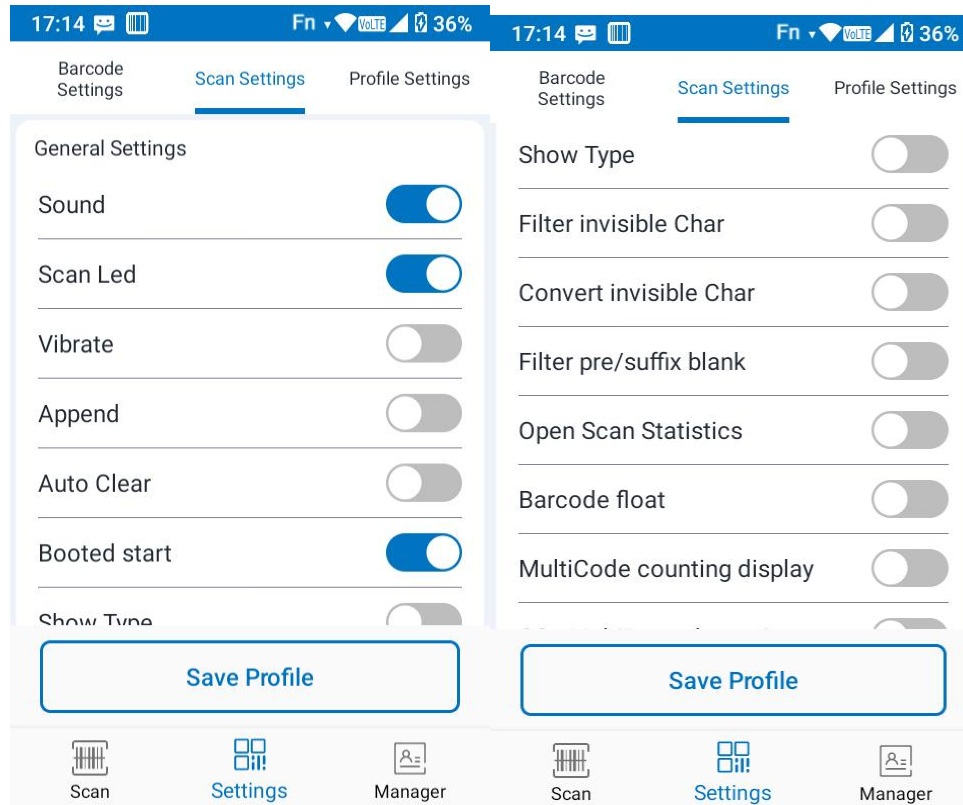


Figure 8-4 2D Scanner Basic Settings Interface

4. Open [Application Settings], where you can turn on/off settings for scanning, as shown in Figure 8-5:

(1) Scan sound : if on, sound alert during scan.

- (2) Scan indicator light: if on, logo indicator light in solid green during scan.
- (3) Vibration: if on, vibration during scan.
- (4) Barcode appending: if on, continuous output of barcode.
- (5) Auto-clear: auto clear the last barcode after successful scan.
- (6) Autostart : if enabled, auto start the scanner application upon boot.
- (7) Show barcode type: if enabled, show barcode type during scan.
- (8) Filter invisible characters: if enabled, filter the invisible characters in barcode.
- (9) Filter barcode opening and closing spaces: if enabled, filter the opening and closing spaces in barcode.
- (10) Hold to scan: if enabled, the scanning light immediately goes out when the scan key is released; if disabled, the scanning light continues until the [Scanning Duration] is reached after the scan key is released.
- (11) Repeat scan: if enabled, the scan will automatically go on continuously.
- (12) Interval time: configurable, the interval time from the completion of barcode scanning to the next scan.
- (13) Restore barcode default: can restore the barcode default settings, as shown in Figure 8-6.
- (14) Barcode suffix: can add barcode output suffix (can be numbers, letters, special characters, etc.).
- (15) Barcode prefix: can add barcode output prefix (can be numbers, letters, special characters, etc.).
- (16) Terminating symbol : can choose the barcode terminating output character, including: Enter, Tab, Space, None.
- (17) Barcode sending mode: can choose to send the barcode by focus entry, broadcast mode, simulate keyboard or clipboard mode (simulate keyboard needs to select the input method that supports hard keyboard), as shown in Figure 8-7.
- (18) Developer options: enter the password 888888 in order to modify the developer options (not recommended), as shown in Figure 8-8.



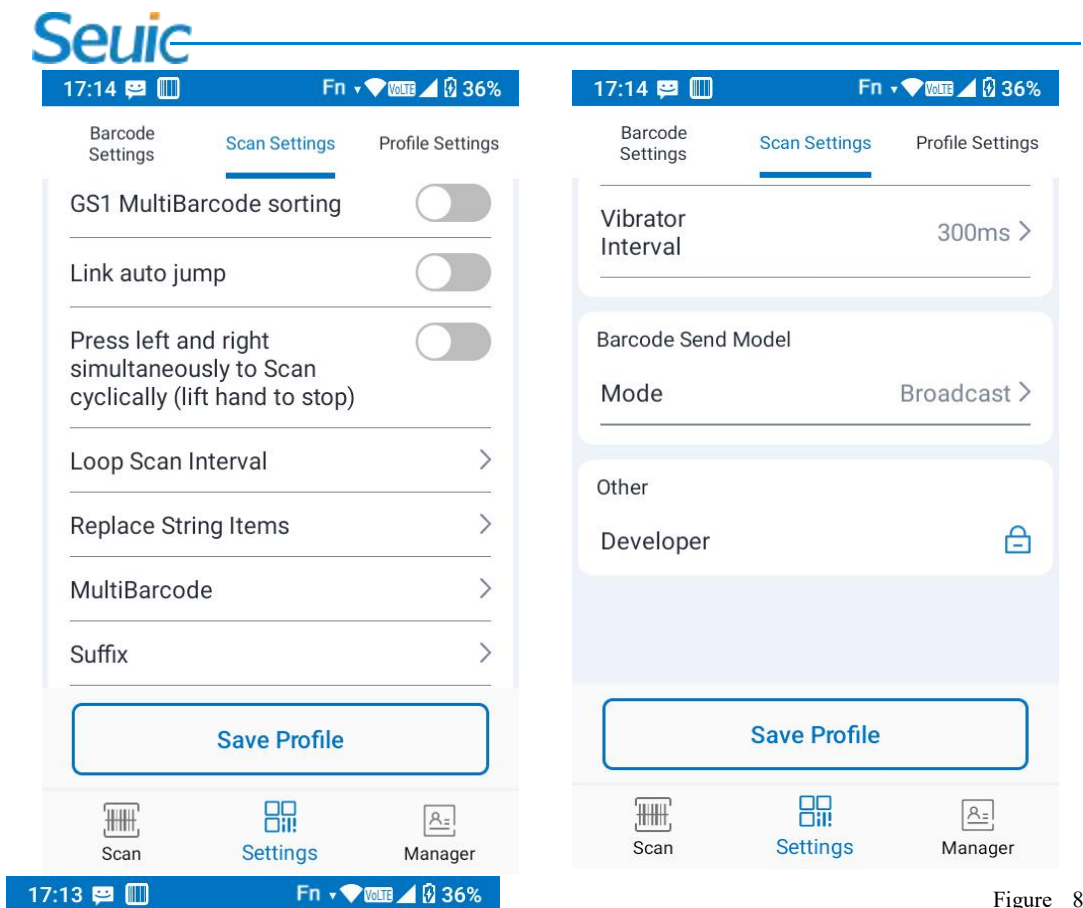


Figure 8-5 Application Settings

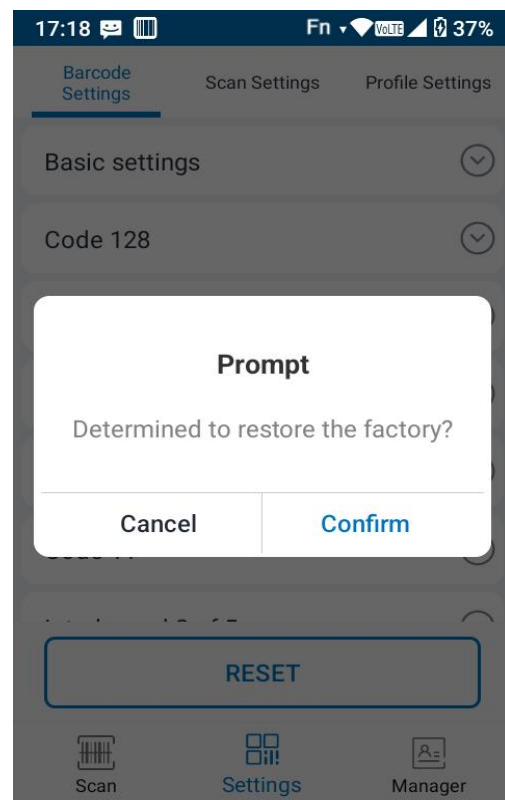
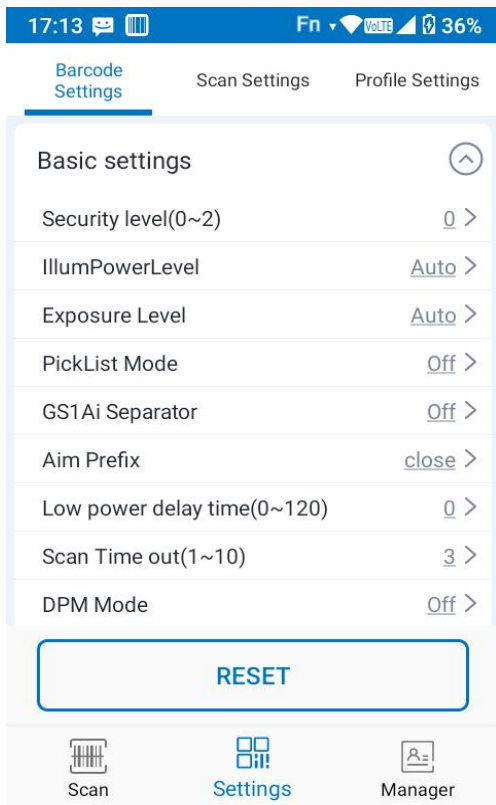


Figure 8-6 Restore Barcode Default

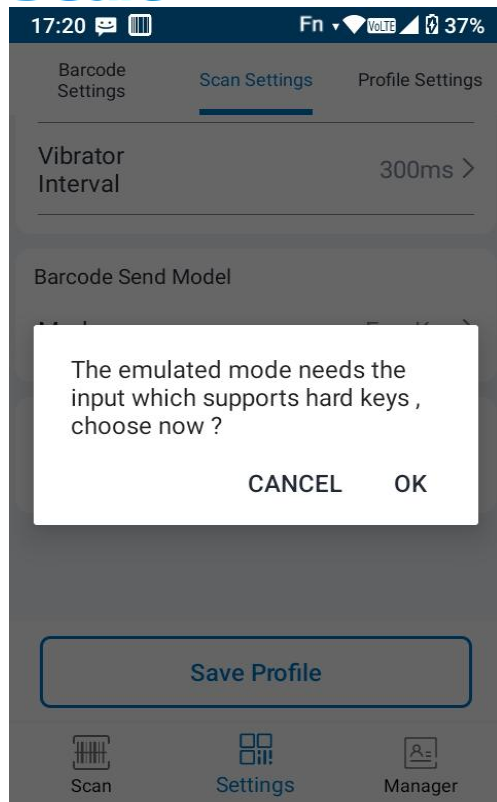


Figure 8-7 Simulate Keyboard Settings

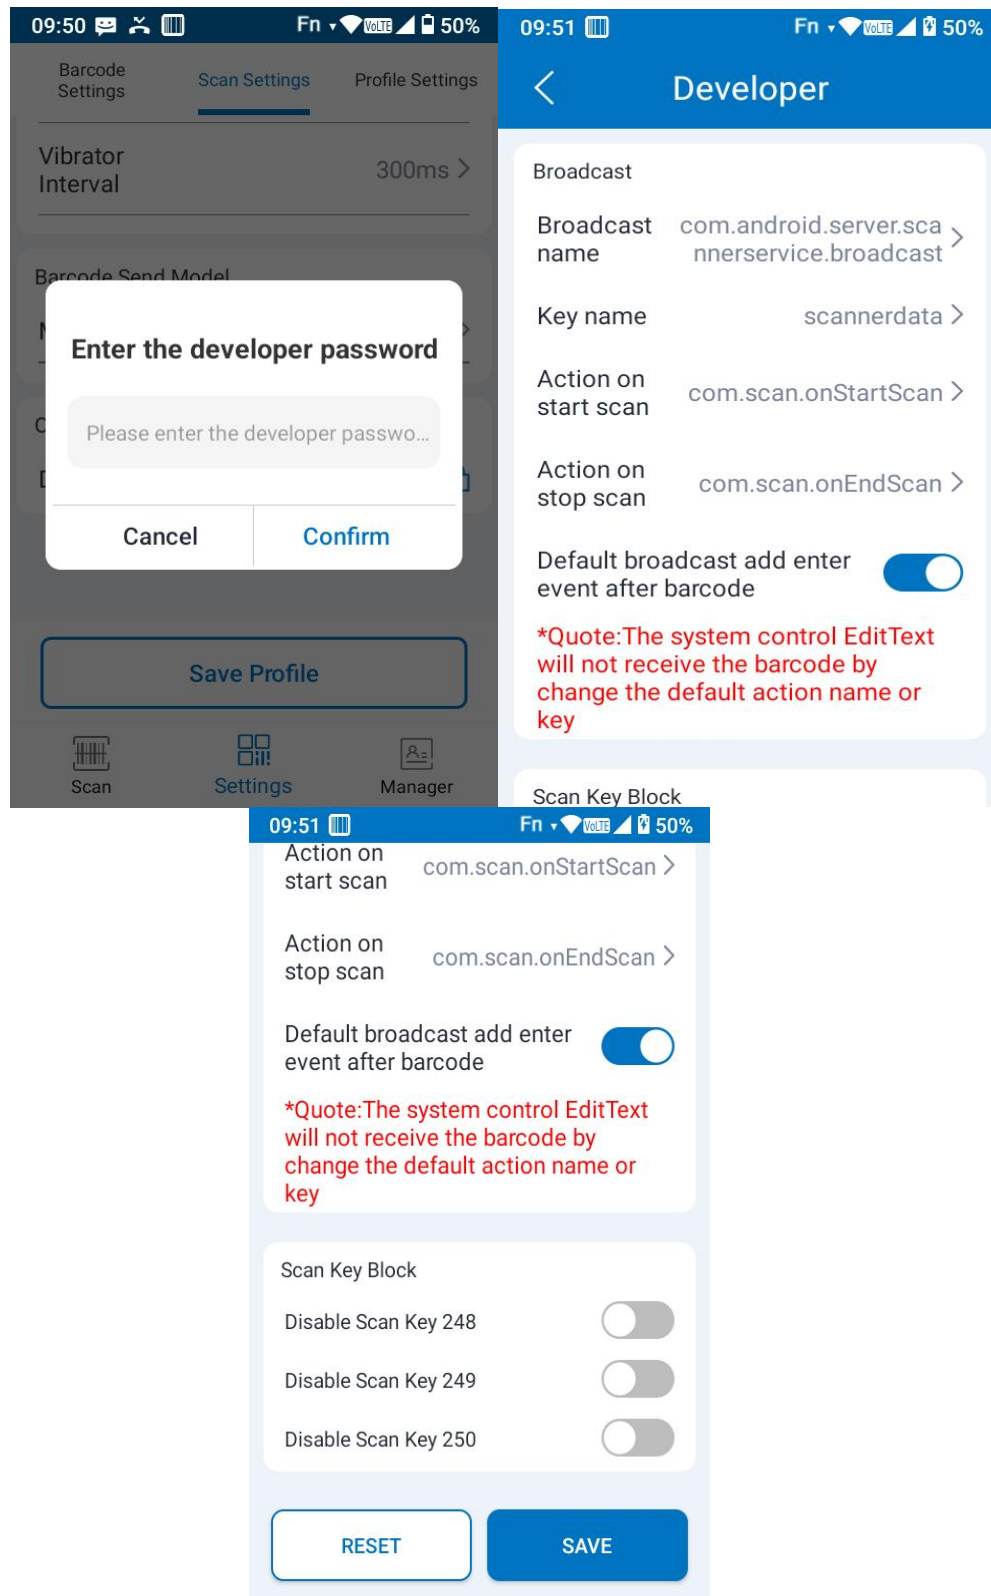


Figure 8-8 Developer Options

5. Program Hide or Exit

- (1) Select [Hide], the program will run in the background, and allows scan by pressing scan key in any editing interface.
- (2) Select [Exit], the program will exit and close.

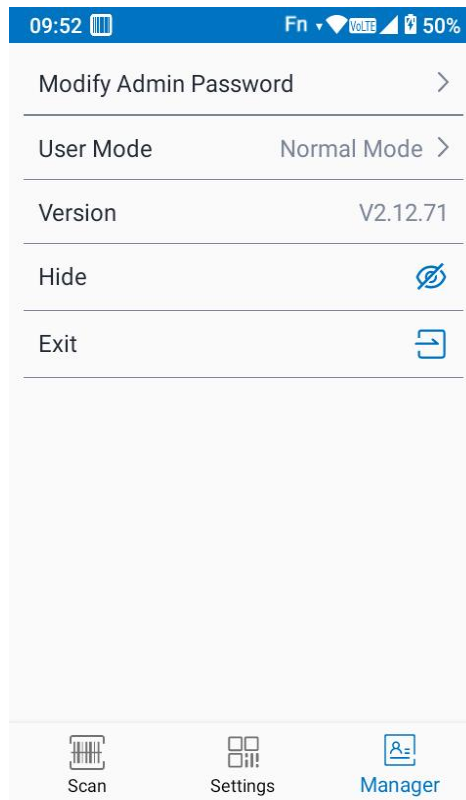



Figure 8-9 Hide and Exit

8.2 System Update

This application allows easy remote system update for customers.



1. Find this icon  and go to [System Update], as follows:

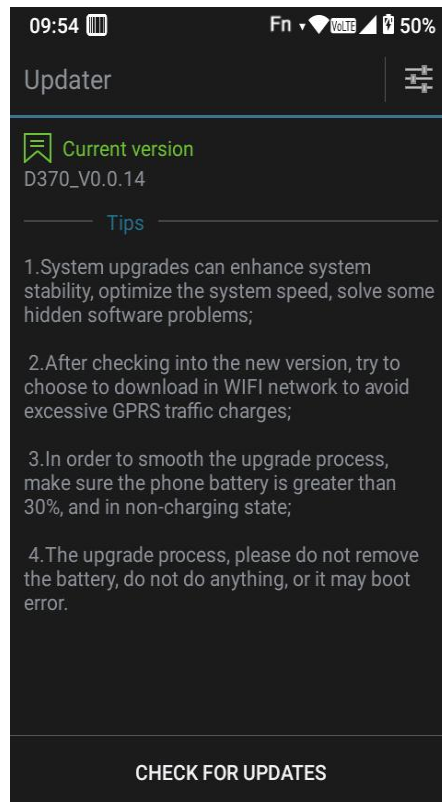


Figure 8- 10 System Update

2. With internet access, tap the check-for-update button. If there is no update, it will show that the current version is the latest version; if there is an update, it will show a newer version is found, tap to enter the download screen, as shown below.

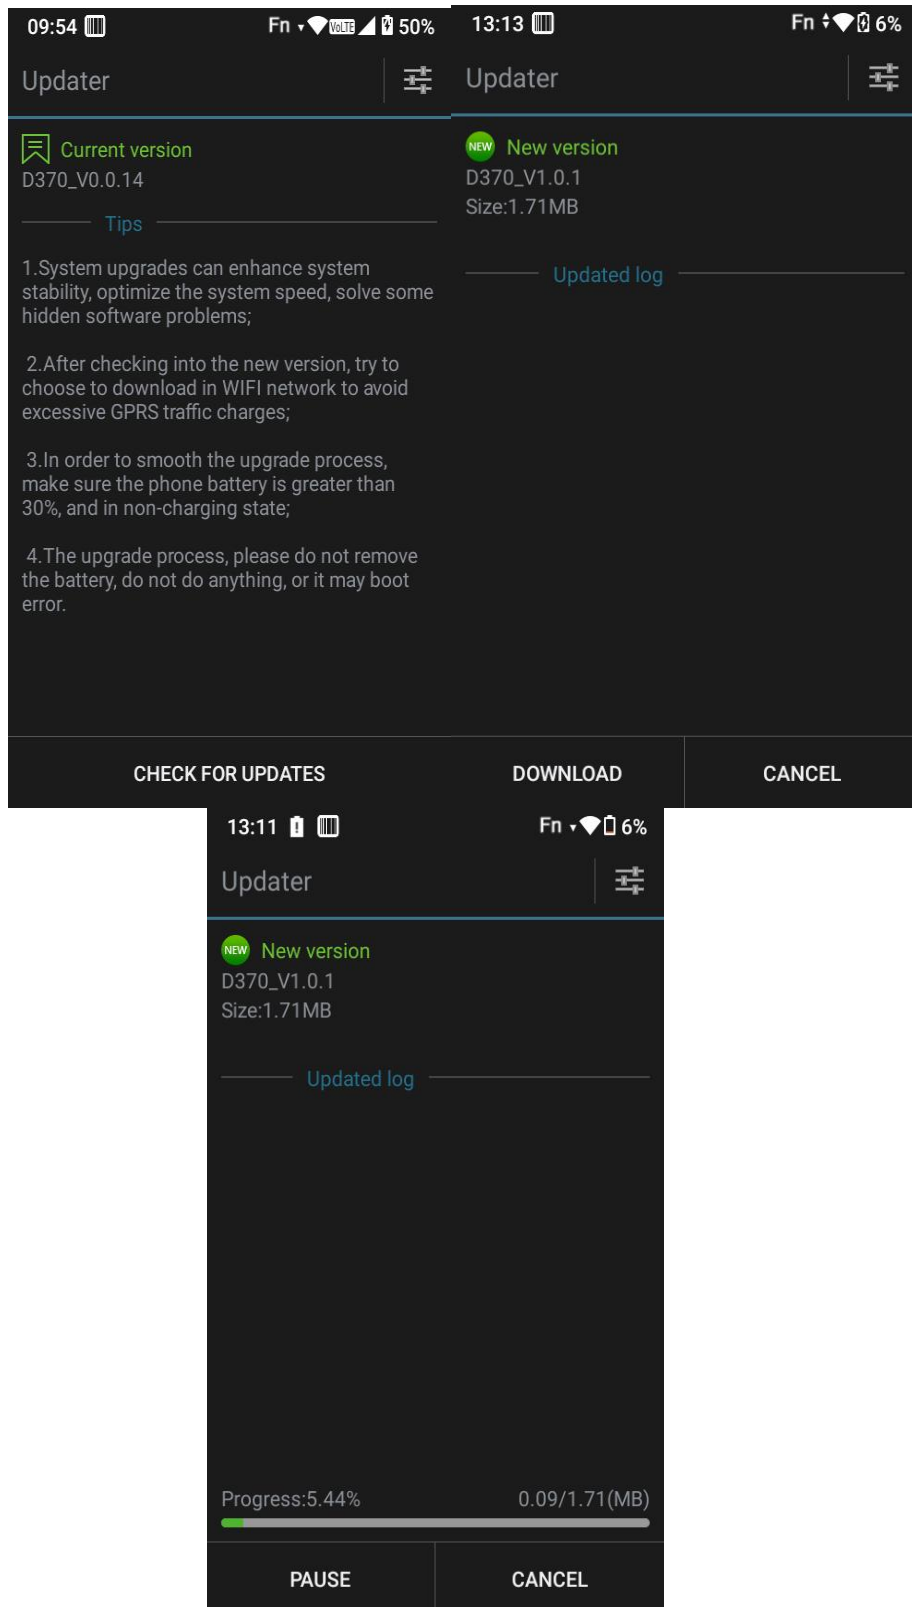


Figure 8- 11 Check for Update and Download

3. Tap Download. Once downloaded, tap Update Immediately and the device will restart into update mode, as shown.

:

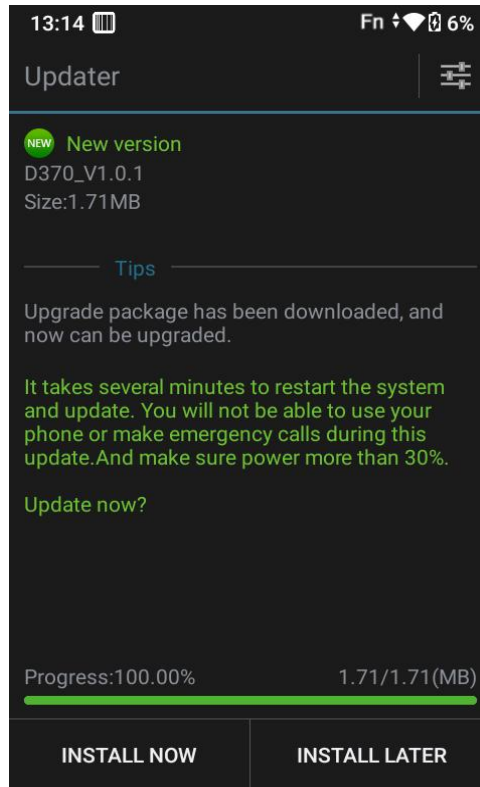


Figure 8- 12 Update Immediately

When the power level is below 30%, the following message will appear and the update cannot be performed.

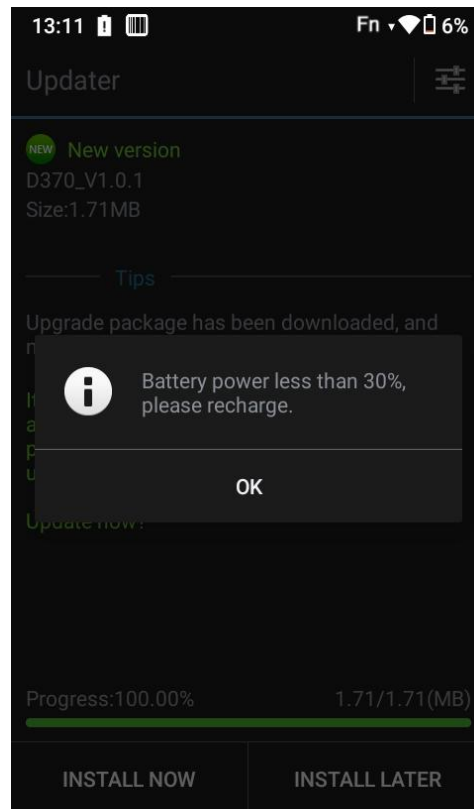


Figure 8- 13 Low Power Handling

4. System update settings,as shown in below figure:

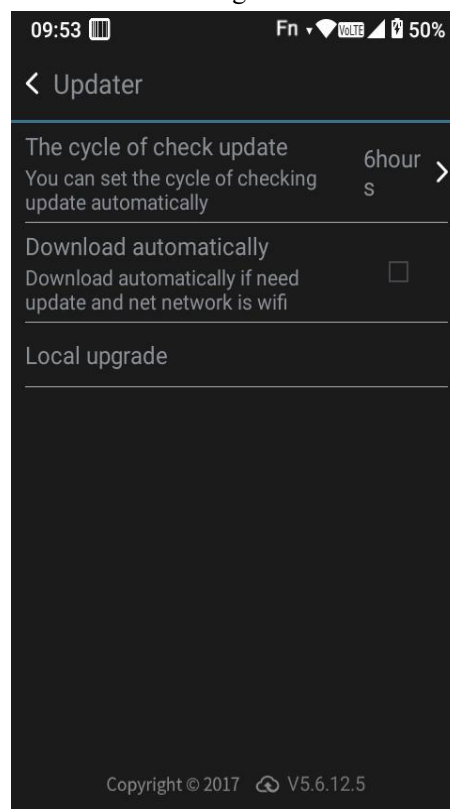



Figure 8- 14 System Update Settings

8.3 Mobile Butler

This product is designed to enable customers to set permissions on the Android handheld terminal and disallow the use of unspecified applications.

- Find this icon  Settings --> Applications, click on the upper right corner settings button, Home Application --> select Mobile Butler, press home button to exit and enter the Mobile Butler launcher interface.

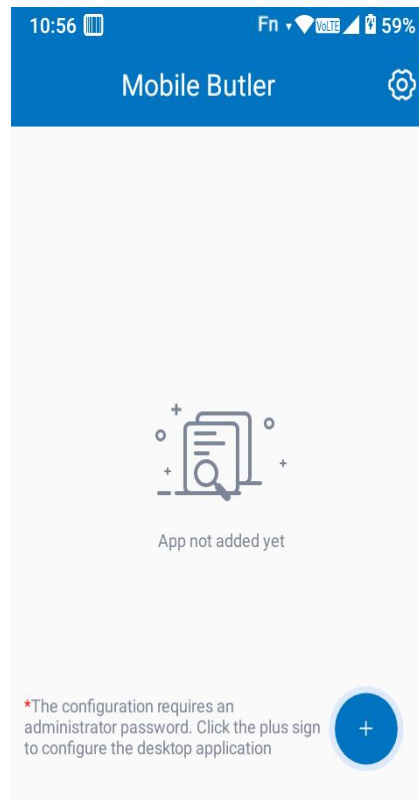
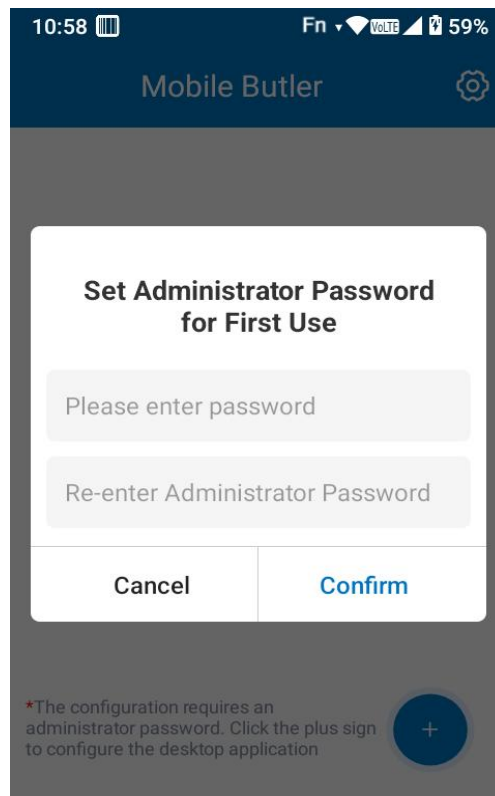



Figure 8- 15 Default Launcher

- Administrator Settings and Change Password

(1) In the Mobile Butler interface, tap  menu button to add desktop items.



As shown in the above, the administrator password has to be set first if not already. Tap [OK] button to jump to the change password interface, as below:

(2) Tap  the menu button again, as follows:

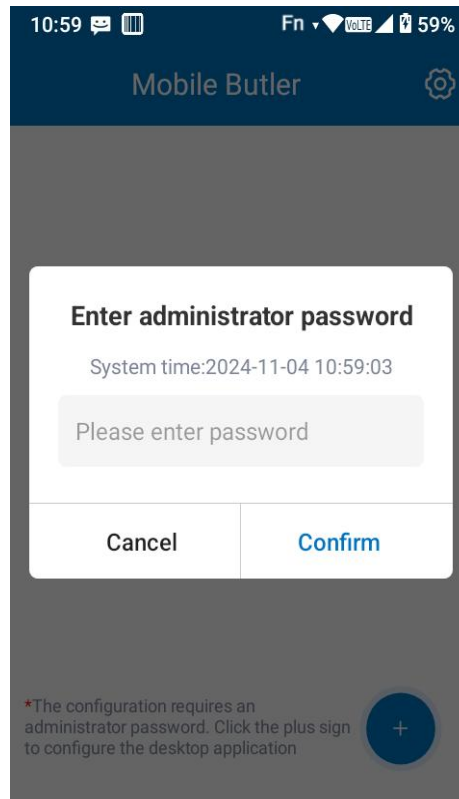


Figure 8- 18 Password Entry Interface

Enter the appropriate administrator password. Once verified, the following will appear:

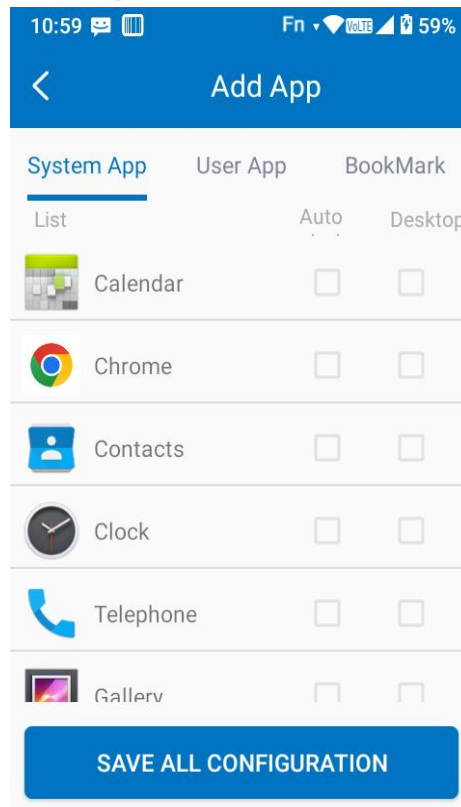


Figure 8- 19 Add Applications Interface

Select apps to add to [Desktop] and tap [Confirm] to complete the addition. Select an app in [Autostart] column, then the app will auto start after the device reboot (Note: currently autostart only supports one app), as shown below:

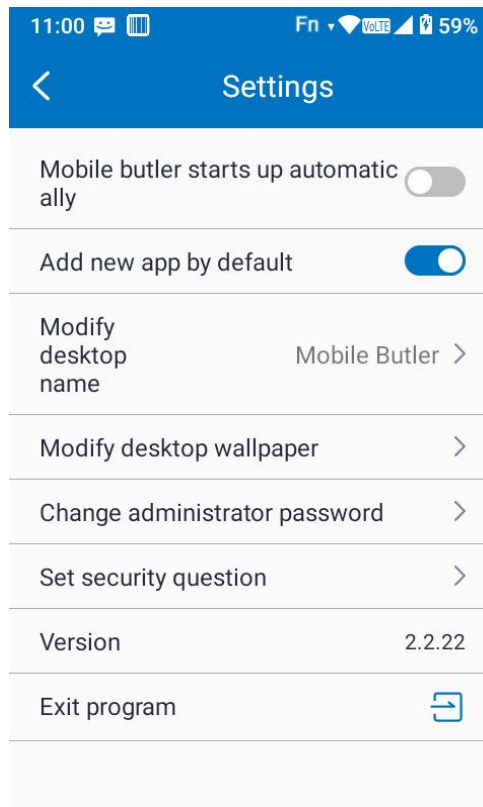
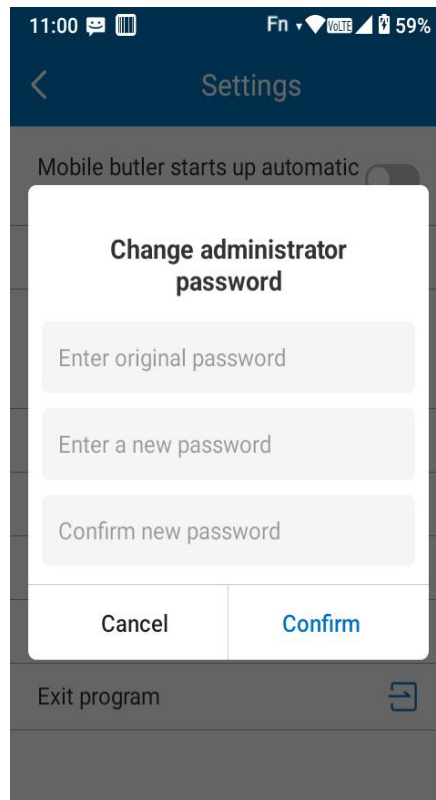


Figure 8-20 Main Interface

(3) Administrator, Change Password

In the Add Applications interface, click [Settings] in the upper right corner to enter the settings interface, click [Change Password] to show the change password screen.



enter the settings interface, click [Change Password] to show the change password screen.

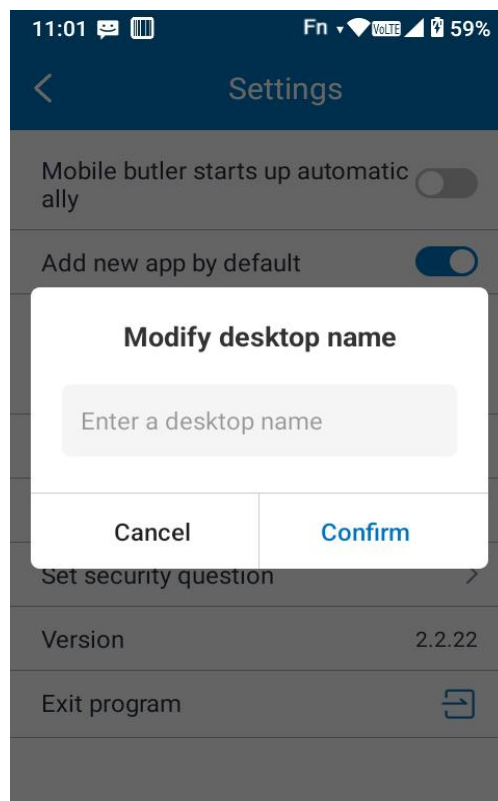


Figure 8-22 Change Name

(5) Replace Wallpaper

Enter [Settings], tap [Change Wallpaper] to show the below:

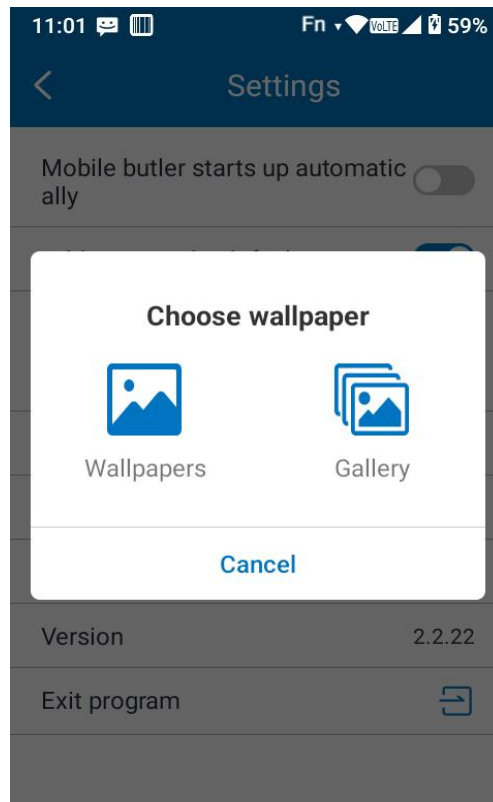


Figure 8-23 Change Wallpaper

(6) Security Settings

Set password security question (selective settings), as shown below:

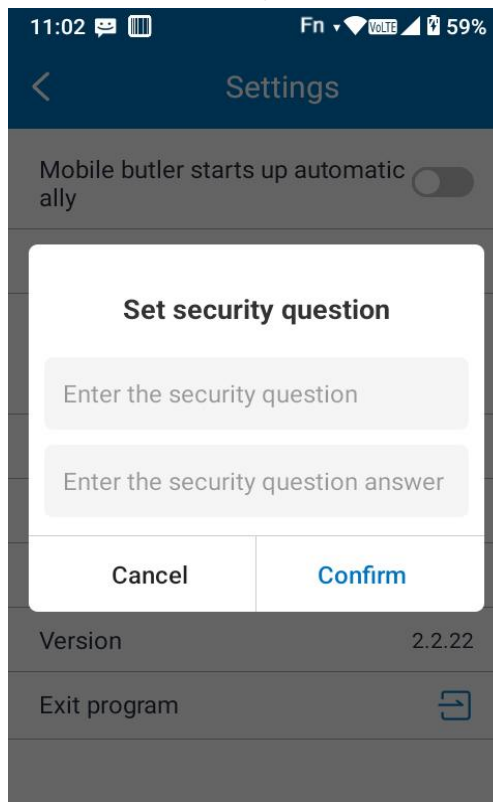


Figure 8-24 Security Settings

As shown in the left picture above, when the security setting is completed, the corresponding option "Forget Password" will be shown in the location where password is required (as shown in the right picture above), which allows to reset the password, otherwise you cannot

retrieve the password.

(7) Add new apps by default <---> Not add new apps by default

Select [Add new apps by default], then all apps installed after switching to Mobile Butler will be shown on Mobile Butler desktop; if select [Do not add new apps by default], then new apps installed will not be shown on desktop.

Note: Applications that are updated online are not "new apps".

(8) Display menu button on desktop <---> Not display menu button on desktop

Control whether the desktop displays the menu button or not, when select [Display menu button on desktop], the button is displayed on the desktop, tapping the button will show options: Settings/ Exit, as shown:

Settings: enter the Mobile Butler settings interface directly (password verification required).

Exit: exit Mobile Butler and go back to the default launcher at the very beginning of the system, (by default, the device has a default launcher option when you first enter Mobile Butler).

(9) Mobile Butler Autostart ON <---> Mobile Butler Autostart OFF

Control whether Mobile Butler is used as the default launcher. [Mobile Butler

Autostart ON] : set the original system launcher as default launcher. [Mobile Butler Autostart OFF] : set Mobile Butler as default launcher.

8.4 Quick Configuration

This application is designed to quickly copy configuration from one device to another of the same model so that the configuration associated with the two devices is identical.

The import of configuration is not possible between different models.



Find this icon to access the Quick Configuration screen.

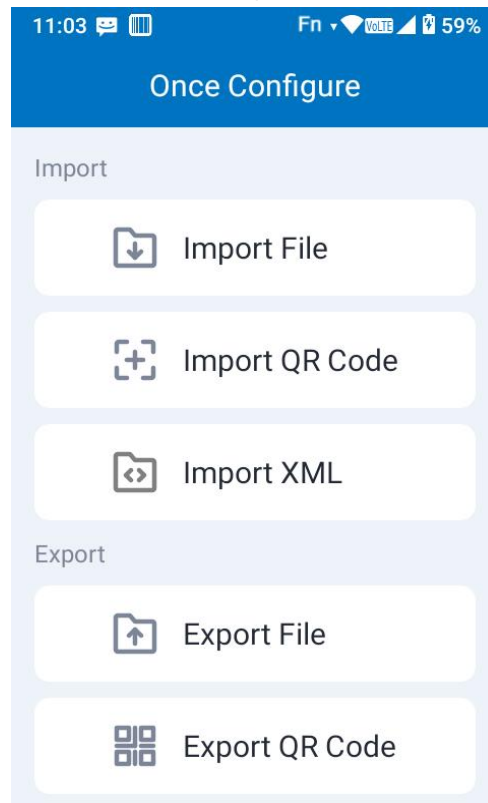


Figure 8-26 Quick Configuration Main Interface

8.4.1 Import

1. File Import

Put the eligible configuration zip file in the specified directory of the external SD card to achieve configuration. The external SD card system path is:

external SD card/SysSetting/Setinfo.tar.gz.

(1) Manual Import :

1) Put the configuration zip package (file name is Setinfo.tar.gz) into the external SD card/SysSetting directory, as shown below:

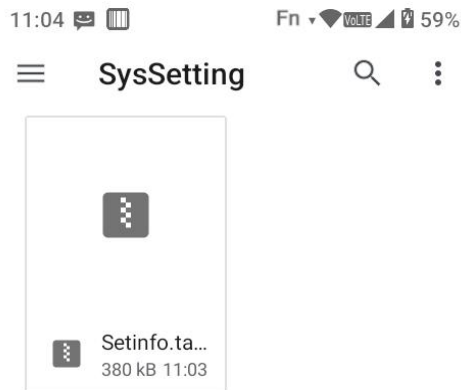


Figure 8-27 Configuring Zip Directory

2) Enter Quick Configuration, click [File Import], and the following prompt pops up, tap [Confirm].

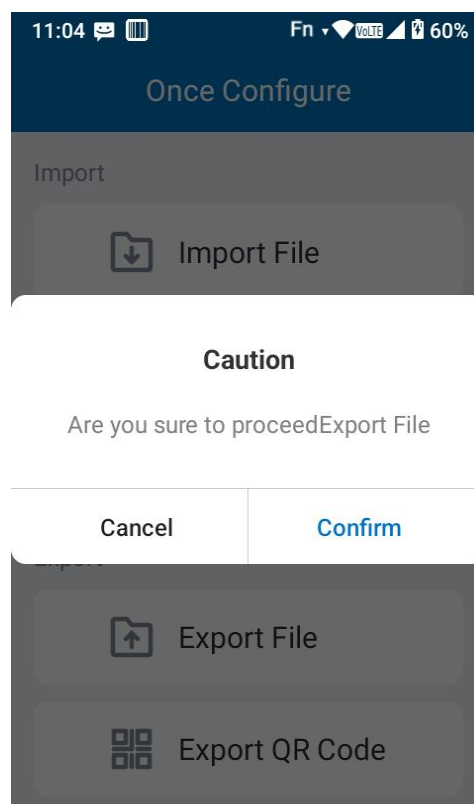


Figure 8-28 File Import

(3) After successful import, the imported items and status will pop up, tap to confirm, then a restart prompt will pop up, tap [Restart Now] to complete (some configurations will not take effect immediately without restart).

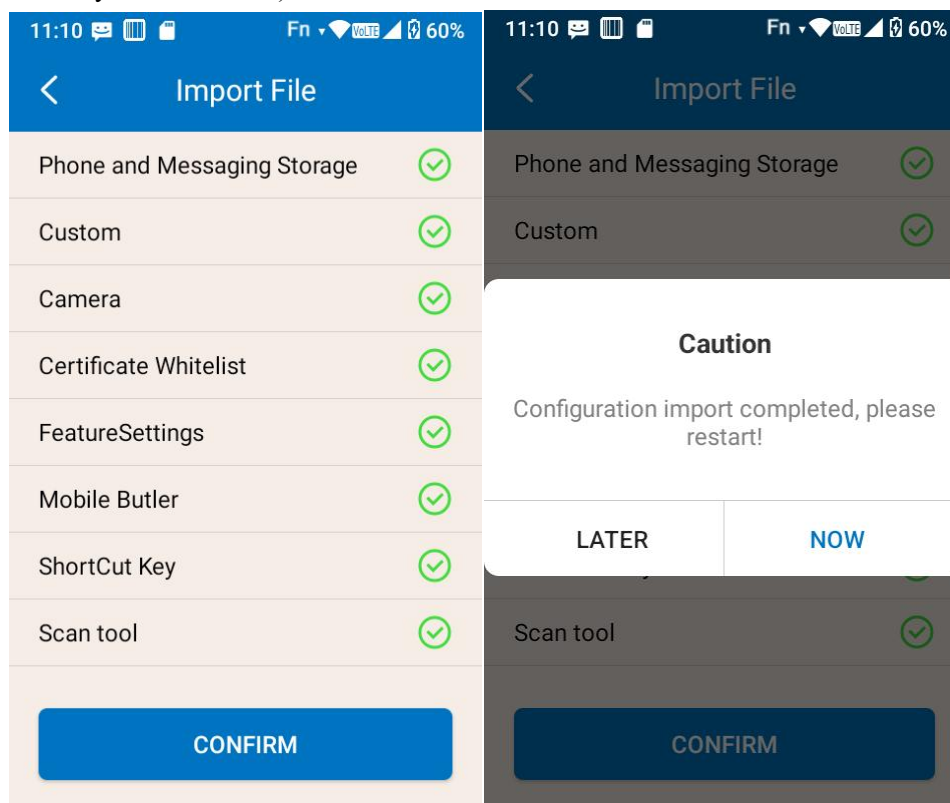


Figure 8-29 File Configuration Import Success

1. QR Code Import

This function can be used to import external configuration files by scanning QR codes, and can call the camera to scan external QR codes to import configuration files.

(1) Enter Quick Configuration, tap [QR code Import], place the QR code to be imported in the scan box, as shown below:



Figure 8-30 QR Code Import Screen

(2) After successful scanning and transmission, the imported items and status of the QR code will pop up, click to confirm, then a restart prompt will pop up, tap [Restart Now] to complete (some configurations will not take effect immediately without restart).

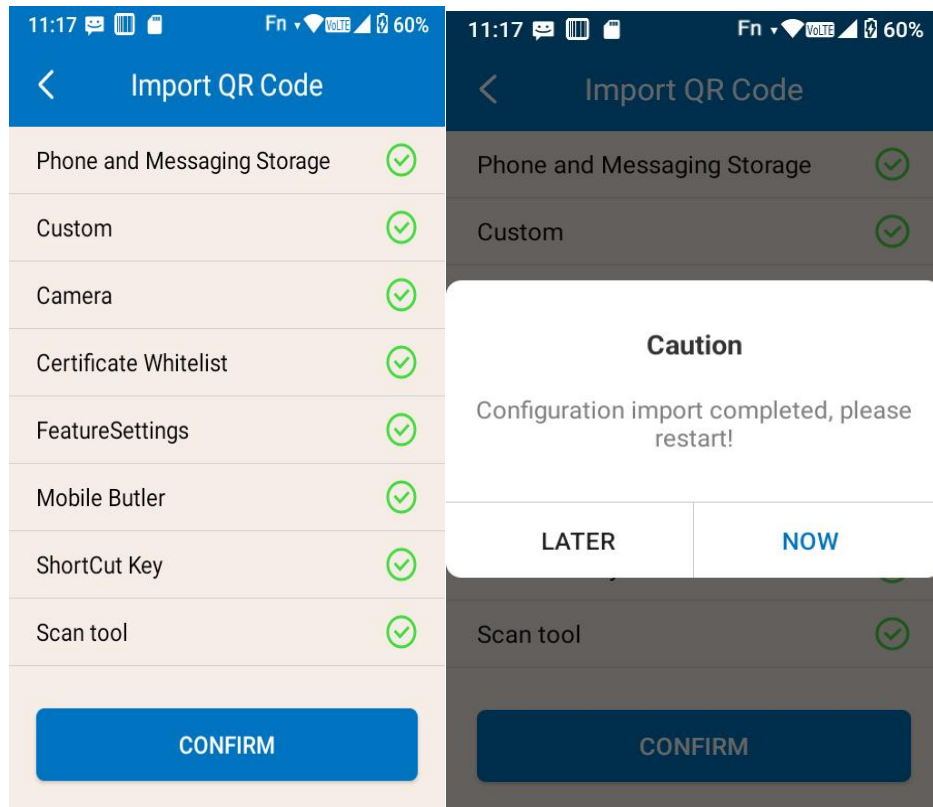


Figure 8-31 QR Code Import Success

8.4.2 Export

1. File Export

This function can export all the configuration items in the configuration import and export tool to the specified directory of the built-in SD card or external SD card of the device. The name of the export file is Setinfo.tar.gz. The path of the export file is: a) external SD card/SysSetting/

b) Built-in SD card/SysSetting/

Where the device has an external SD card, file exports are preferred to be on external SD card.

(1) Enter the Quick Configuration, tap [File Export], the following interface pops up to indicate that the export was successful, where the external SD card already has a configuration document, the export will prompt notification to overwrite the original.

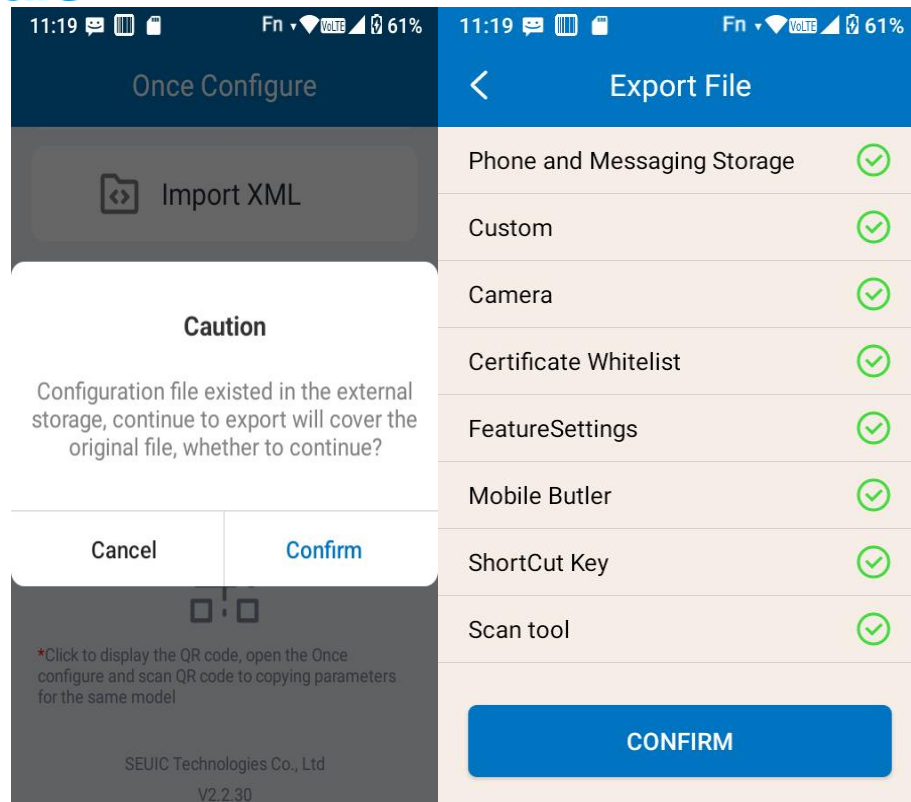


Figure 8-33 File Export

(2) The exported file name is Setinfo.tar.gz, enter [File Manager] ---> [Phone Storage] ---> [External SD Card] ---> [SysSetting] to view:

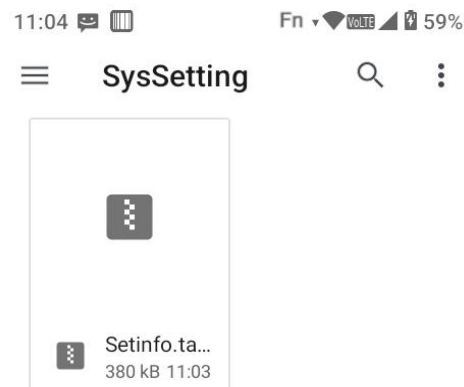
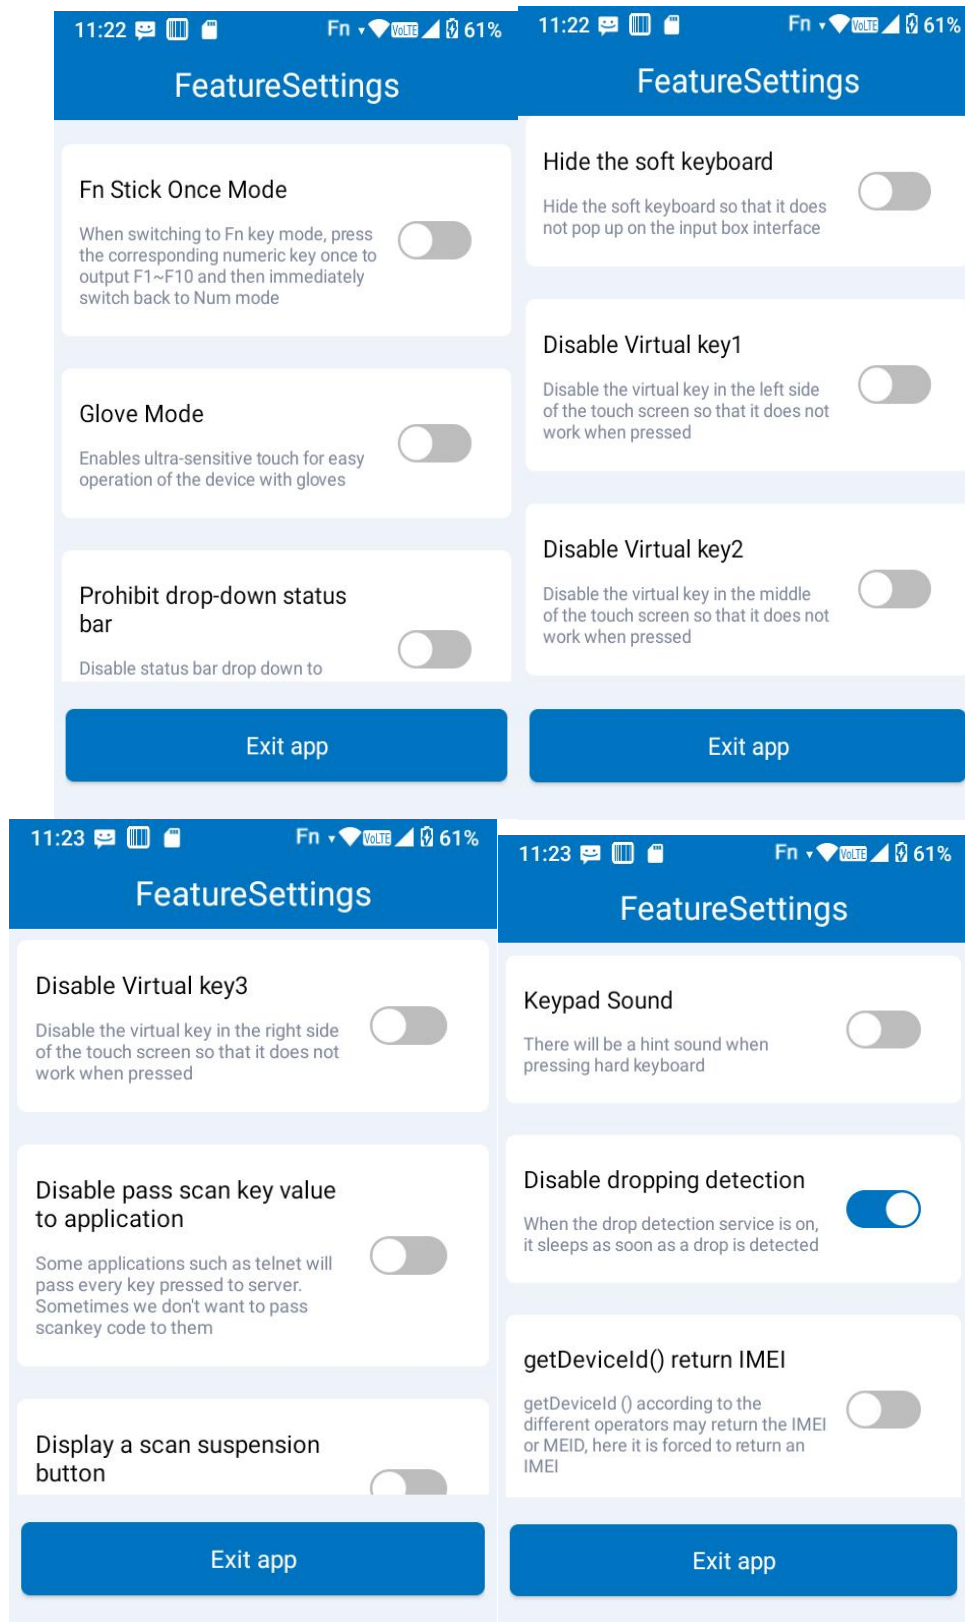


Figure 8-33 File Export Path

8.5 Feature Key Settings

This application is used for quick and easy implementation of customer specific needs.



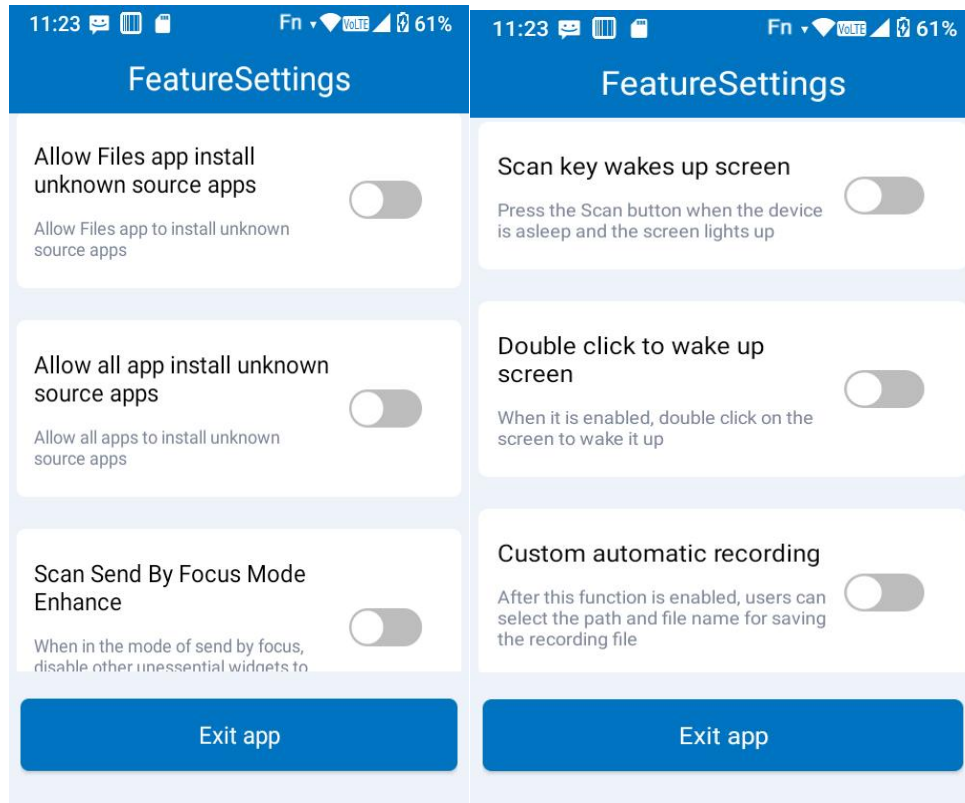


Figure 8-38 Feature Key Settings

8.5.1 Fn Sticky Keys

When switching to Fn key mode, press the corresponding numeric key to output F1~F10 once, and the system then immediately switches back to Num mode.

8.5.2 Block P5 Function Key

If enabled, the P5 key function is disabled.

8.5.3 Block P7 Function Key

If enabled, the P7 key function is disabled.

8.5.4 Touchscreen Glove Mode

If enabled, support touchscreen operation with gloves, where the touchscreen is more sensitive

8.5.5 Disable Status Bar Dropdown

If enabled: effective immediately where the dropdown menu is not available.

If disabled : effective immediately where the dropdown menu functions normally.

8.5.6 Prohibit Passing Scan Key Value to Apps

If enabled: some applications such as Telnet will send all keys pressed to the server.

If disabled : in some cases, forbid applications such as Telnet to pass all the keys pressed to the server.

8.5.7 Show Scan Float Button

If enabled: shows a float button on screen which allows to trigger scan via touchscreen.

If disabled : no float button on screen, and scan can only be triggered by pressing physical scan keys.

8.5.8 Hardware Keyboard Tones

If enabled: there are corresponding tones when using the physical keyboard.

If disabled : there are NO corresponding tones when using the physical keyboard.

8.5.9 Prohibit Fall Detection

If enabled: the system will not go to sleep when the device is dropped.

If disabled : the system will immediately go to sleep when the device is dropped.

8.6 Digital Certificates Whitelist

This software is used to add specific digital certificates to the whitelist.

Applications that are signed by digital certificates from the whitelist can be directly installed without enabling the “Install from Unknown Source” in system settings. The application password is: 4007770876.

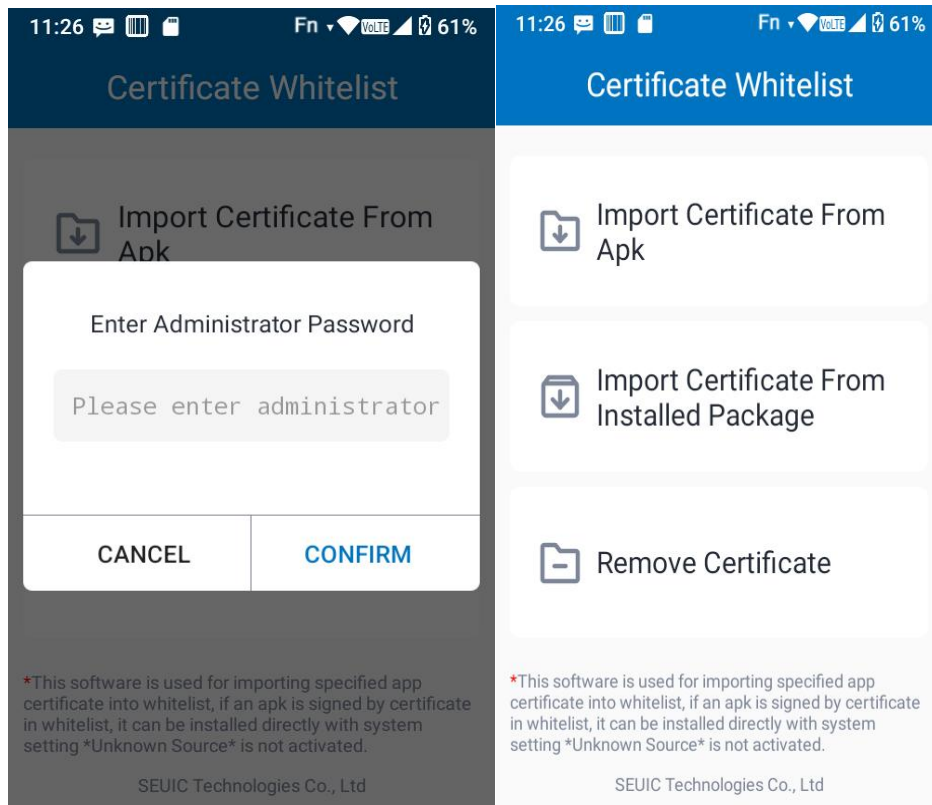


Figure 8-39 Digital Certificates Whitelist

1. Import certificates from APK files

The application will search for all APK files in the internal storage device directories and display their file names and located directories. The user can import the certificates from the selected APK files into the system by tapping the [Import] button after checking single or multiple display items.

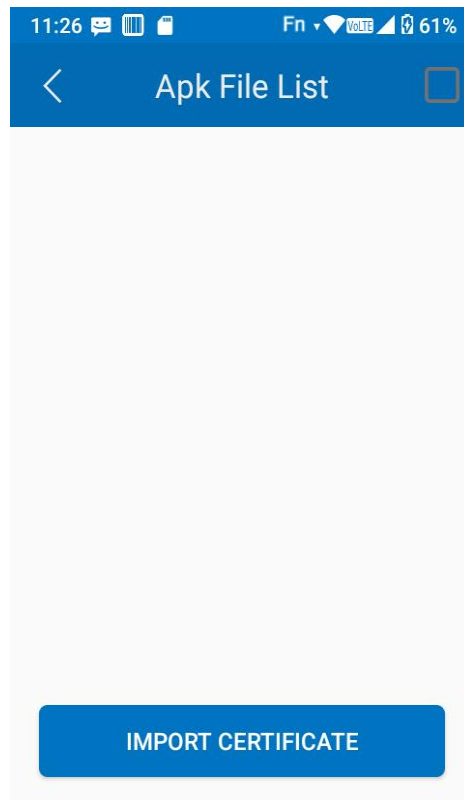


Figure 8-40 APK File Import List

2.Import certificate from installed packages

The application will display the names of third-party apps installed in the system and their package names, and the user can import the certificates from the selected APK files into the system by tapping the [Import] button after checking single or multiple display items.

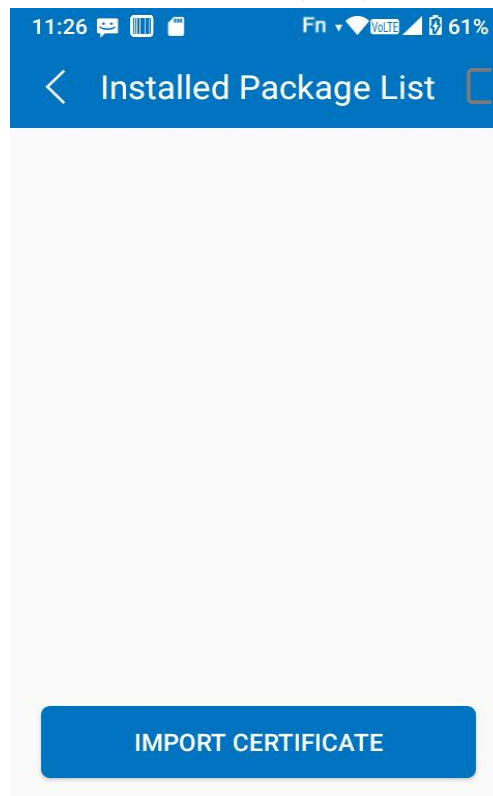


Figure 8-41 Installed Package List

3. Remove Certificates from Whitelist

The application will display the names of added certificates. Tap [Remove] to remove the certificates from the system whitelist after checking single or multiple display items. Those displayed in gray without a checkbox are system default certificates that cannot be deleted.

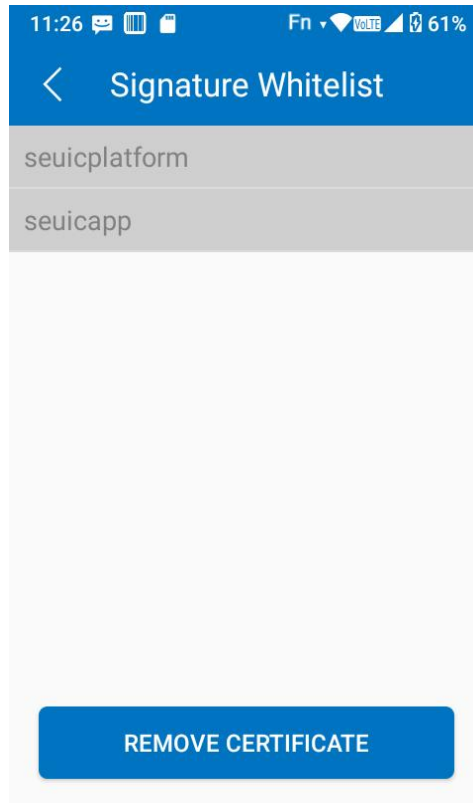


Figure 8-42 Signature Whitelist Categories


Cautions:

The added certificate will be named after the app package name.

For certificates with the same content but different package names, only one record is saved, and it is named after the first record.

8.7 Hotkey Settings

This application is used for shortcut key (Fn) settings, which allows customers to quickly use frequently used applications.

1. Find this icon  and enter [Hotkey Settings] interface.

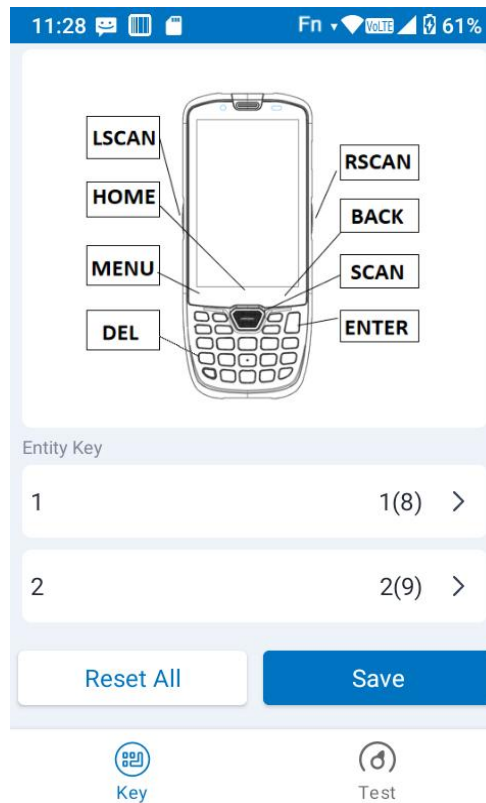


Figure 8-43 Hotkey Settings Main Interface

2. Hotkey settings, tap the Fn key (e.g., F2) to enter the settings interface, as shown below:

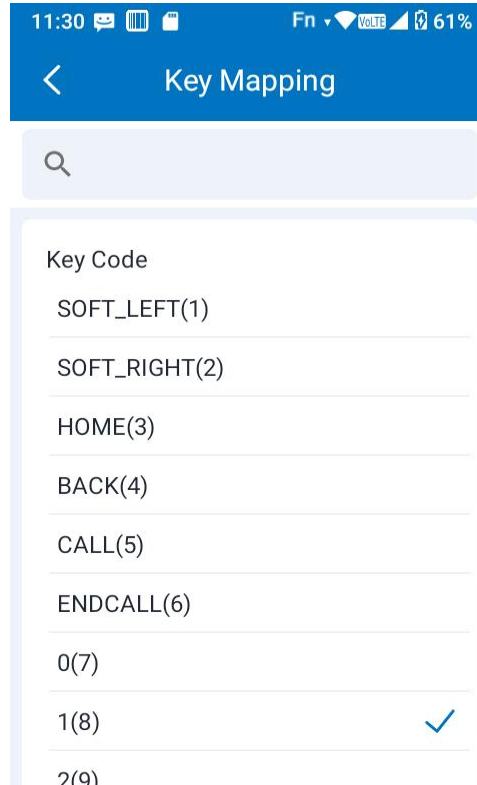


Figure 8-44 Adding Hotkeys Interface

Simply select the appropriate application, as shown below:

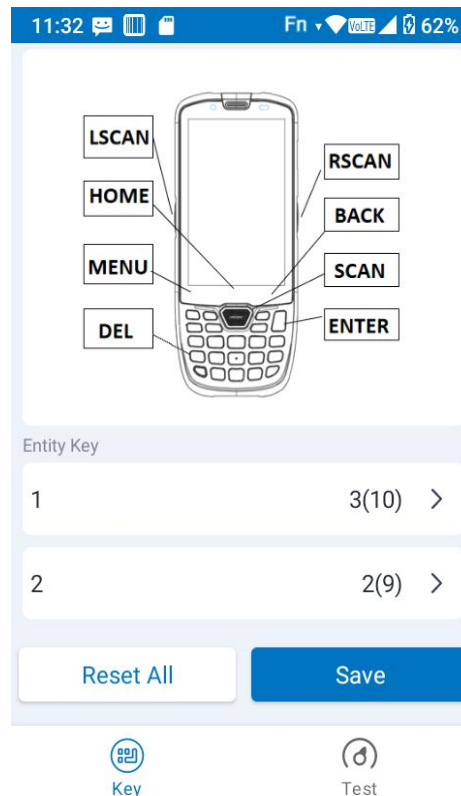


Figure 8-45 Hotkey Settings Success Interface

3. To unbind a hotkey, press and hold the Fn key (e.g., F2) to bring up the following screen:

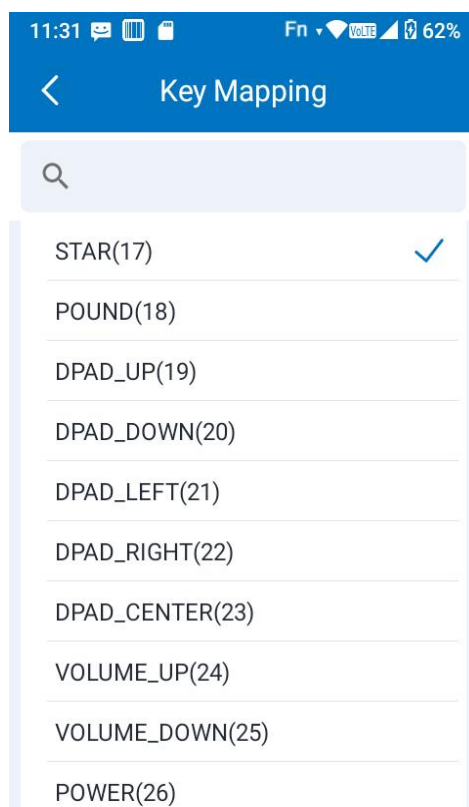


Figure 8-46 Unbind hotkey

Tap [Unbind] to cancel the hotkey; Tap [Cancel] to exit the hotkey unbind screen.

4. To use hotkeys, switch the keys on the device to FN mode, the taskbar at the top of the screen will show the FN mode, and then press the keyboard F1- F9. But for P1-P7 shortcut keys, no need to switch to Fn mode.。

Chapter 9. Troubleshooting

Issue	Cause	Solution
AUTOID®3P does not power up after pressing the power button.	Low battery or uncharged battery.	Charge or replace the battery.
	Incorrect battery installation.	Install the battery correctly.
	System crash.	Perform a soft reboot.
Rechargeable battery no longer charges.	Battery malfunction.	Replace the battery.
	Battery temperature too high/low.	Keep the battery at room temperature.
No sound.	Volume set too low or turned off.	Adjust the volume.
AUTOID® 3Pauto turns off.	AUTOID® 3P is inactive.	After a period of inactivity, the mobile data terminal will turn off. This period can be set to 15s to 30min or never sleep
	Battery is drained.	Charge or replace the battery
AUTOID® 3Pfails to decode when reading a barcode.	Scanner program is not opened	Load the scanner program inAUTOID® 3P
	Currently in barcode settings or application settings screen.	Set the scanner to the scan screen or hide the scanner.
	Unreadable barcode.	Ensure that the barcode is not defective.
	Barcode decoding function is not enabled.	Enter barcode settings, open corresponding decoding.
	AUTOID® 3Pdoes not support this barcode type decoding.	
	The distance between the AUTOID® 3P and the barcode is not appropriate.	Place the AUTOID® 3P in the correct scanning range.
Unable to connect to AP.	Displays failure".	" authentication
Unable to take a picture.	Prompts "No storage device".	Exit USB storage mode.
	Prompts "camera malfunction".	Turn off 2D scanningwhich blocks camera usage.
	Prompts " Not enough space	Free up storage or

	on SD card".	switch storage location.
Unable to access the Internet using mobile data.	Mobile data is not turned on.	Go to Settings and enable mobile data.
	Incorrect network mode selection, and SIM card is not registered.	Go to Settings and select the correct network mode.
	SIM card payment default.	Timely top up SIM card.

Optional Accessories

Please keep the original box and packaging for future maintenance or storage of the device.

The following accessories can better enhance your work and can be purchased if needed.

One AUTOID® 3P Series Device

One USB Cable (standard)

One Hand Strap (standard)

Device Protect Cover (optional)

Device Single Charging Dock (includes battery charging) (optional)